



# HARGROVE GAS LOG PINECONE SWITCH INSTALLATION INSTRUCTIONS

FOR USE WITH MILLIVOLT VALVES ONLY (VENTED / VENT-FREE)

**THE PINECONE SWITCH IS TO HELP KEEP ANY SWITCHES OR WIRES HIDDEN WHILE ACHIEVING GREAT AESTHETICS.**

## STEPS FOR PROPER INSTALLATION

When starting this installation the accessory kit should be in the fireplace per the installation instructions in your gas log set.

1. Remove all parts from the shipping container. You should have the following parts. If you do not have all these parts please contact your local Distributor/Dealer. (Fig. 1)

1. #1221(top portion of pinecone)
2. #1222(bottom portion of pinecone)
3. Male Spade Terminal Rocker Switch (On/Off Switch)
4. (2) Female Spade Terminals

2. Take the Female spade terminals out of the plastic bag and crimp the spade terminals to the 18-gauge wire (provided in the Millivolt kit) with a pair of pliers. Make sure that you have a good strong connection.

3. Once you have connected the terminals to the wires, run the wires up through the bottom of the pinecone.

4. Take the Rocker Switch out of the plastic bag, attach the Male spade terminals from the rocker switch to the female terminals of the wire, and make sure you have a good strong connection. (Fig. 2)

5. Next, you need to pull the wire back through the bottom of the pinecone and place the switch inside the hole of the pinecone. Push the switch into the hole for a snug fit.

6. Make sure your switch is in the OFF position. Reference the Millivolt Lighting Instructions for lighting the pilot and operation. Once the pilot is lit press the switch to the ON position to get the main burner flame.

7. Place the pinecone inside the firebox, towards the front of the fireplace opening. Do not place too close to the main burner. The switch may be affected by the heat.



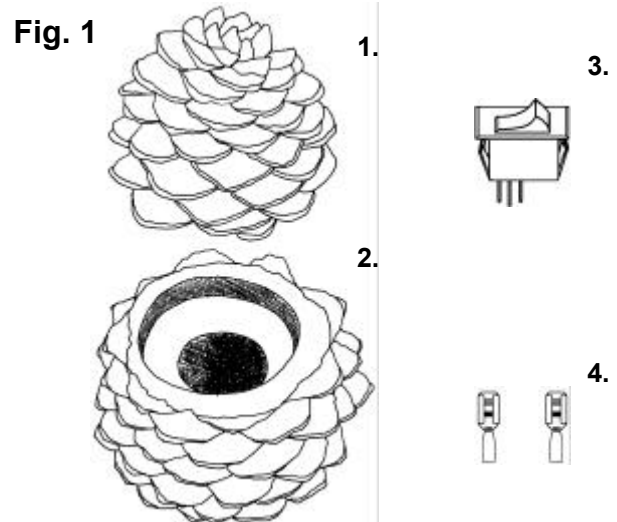


Fig. 2

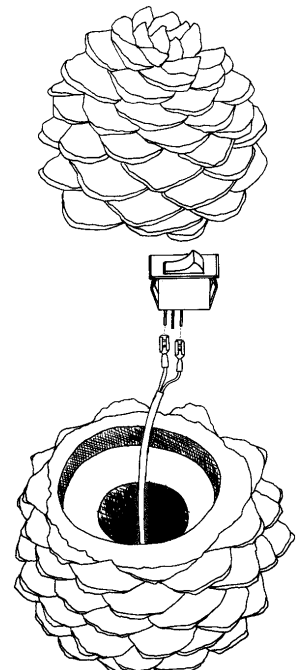

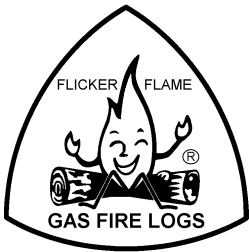

# HARGROVE GAS LOG BARK CHIP SWITCH INSTALLATION INSTRUCTIONS

FOR USE WITH MILLIVOLT VALVES ONLY (VENTED / VENT-FREE)

THE BARK CHIP SWITCH IS TO HELP KEEP ANY SWITCHES OR WIRES HIDDEN WHILE ACHIEVING GREAT AESTHETICS.

## STEPS FOR PROPER INSTALLATION

When starting this installation the accessory kit should be in the fireplace per the installation instructions in your gas log set.

1. Remove all parts from the shipping container. You should have the following parts. If you do not have all these parts please contact your local Distributor/Dealer. (Fig. 1)

1. BC-1 (Bark Chip)
2. Male Spade Terminal Rocker Switch (On/Off Switch)
3. (2) Female Spade Terminals

2. Take the Female spade terminals out of the plastic bag and crimp the spade terminals to the 18-gauge wire (provided in the Millivolt kit) with a pair of pliers. Make sure that you have a good strong connection.

3. Once you have connected the terminals to the wires, run the wires up through the bottom of the Bark Chip.

4. Take the Rocker Switch out of the plastic bag, attach the Male spade terminals from the rocker switch to the female terminals of the wire, and make sure you have a good strong connection. (Fig. 2)

5. Next, you need to pull the wire back through the bottom of the bark chip and place the switch inside the hole of the bark chip. Push the switch into the hole for a snug fit.

6. Make sure your switch is in the OFF position. Reference the Millivolt Lighting Instructions for lighting the pilot and operation. Once the pilot is lit press the switch to the ON position to get the main burner flame.

7. Place the bark chip inside the firebox, towards the front of the fireplace opening. Do not place too close to the main burner. The switch may be affected by the heat.

Fig. 1

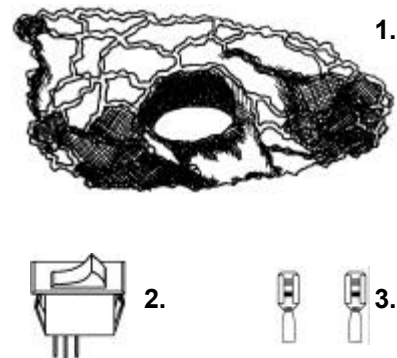


Fig. 2

