


# WOODLAND TIMBERS

## SEE-THRU LOG DIAGRAM

WTS1827ST

Step 1


(Top View)

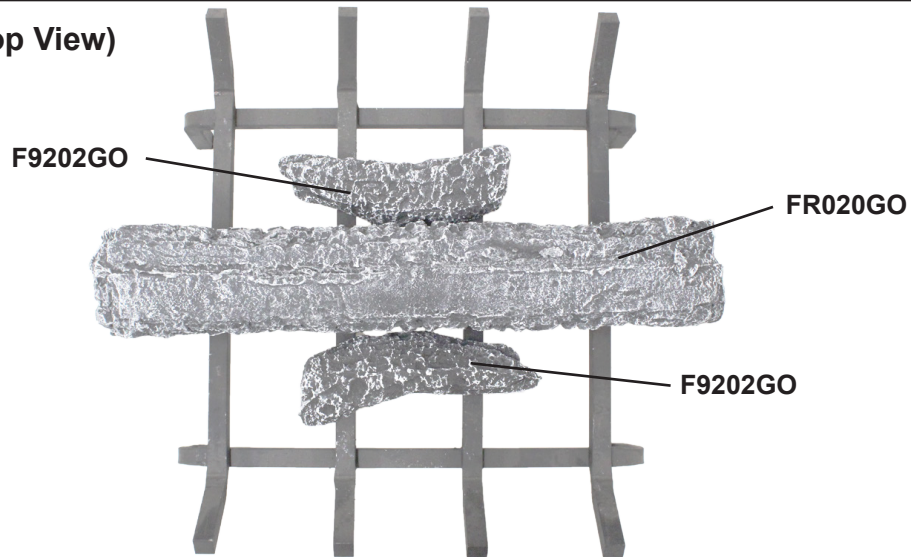

Step 2

(Front View)


(Back View)

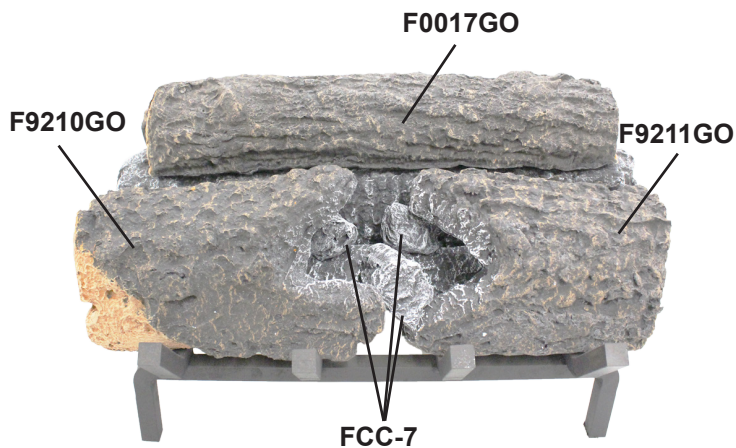

Step 3

(Front View)

(Back View)

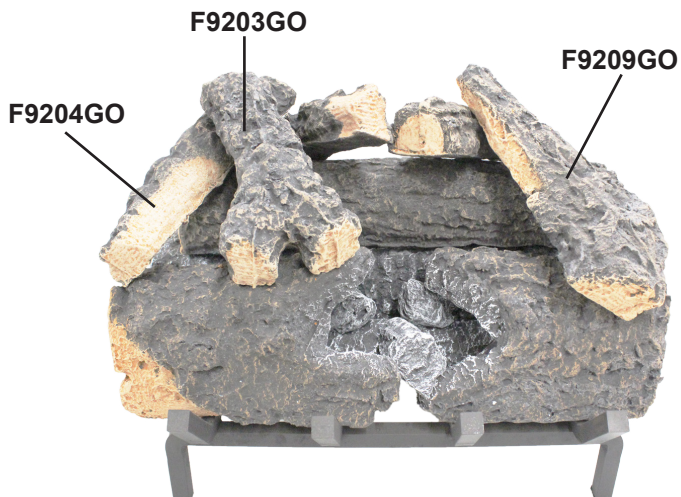

040323

# WOODLAND TIMBERS

## SEE-THRU LOG DIAGRAM

WTS2127ST

---

Final

(Top View)






# WOODLAND TIMBERS

## SEE-THRU LOG DIAGRAM

WTS2428ST

Step 1


(Top View)

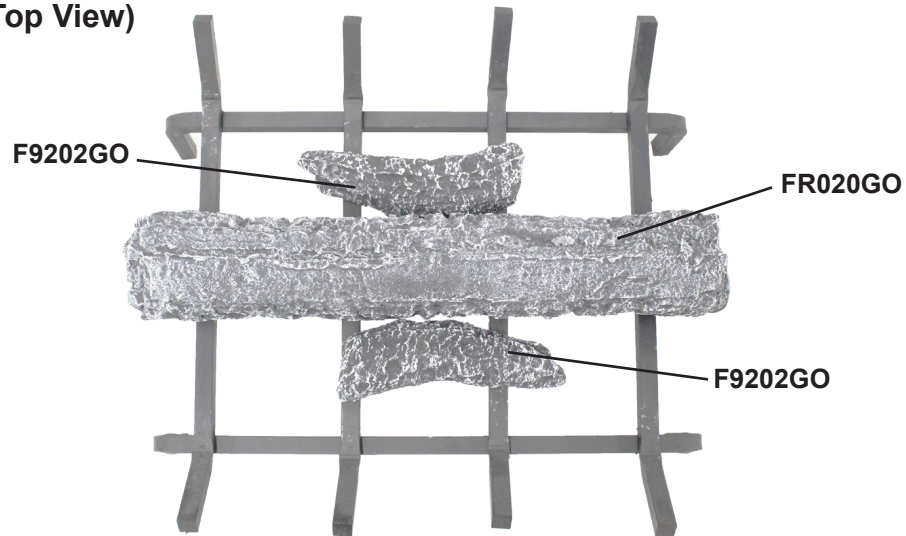

Step 2

(Front View)


(Back View)

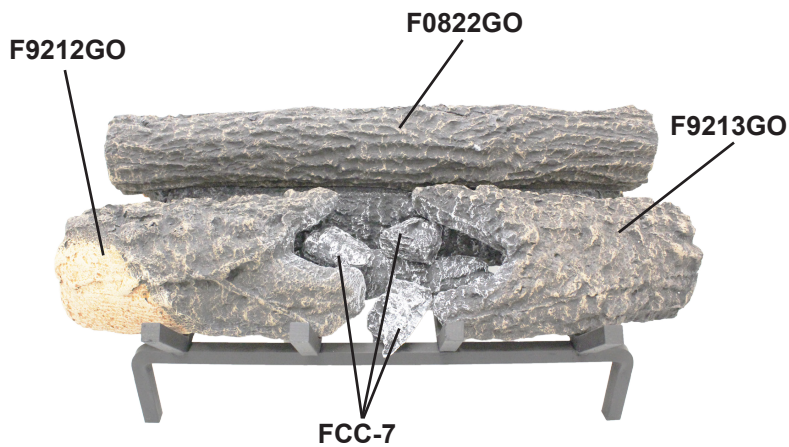

Step 3

(Front View)

(Back View)

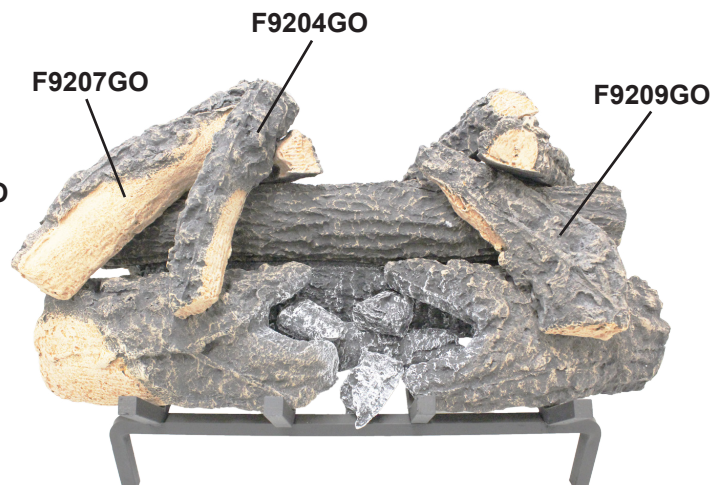

# WOODLAND TIMBERS


## SEE-THRU LOG DIAGRAM

WTS2428ST

---

Final

(Top View)

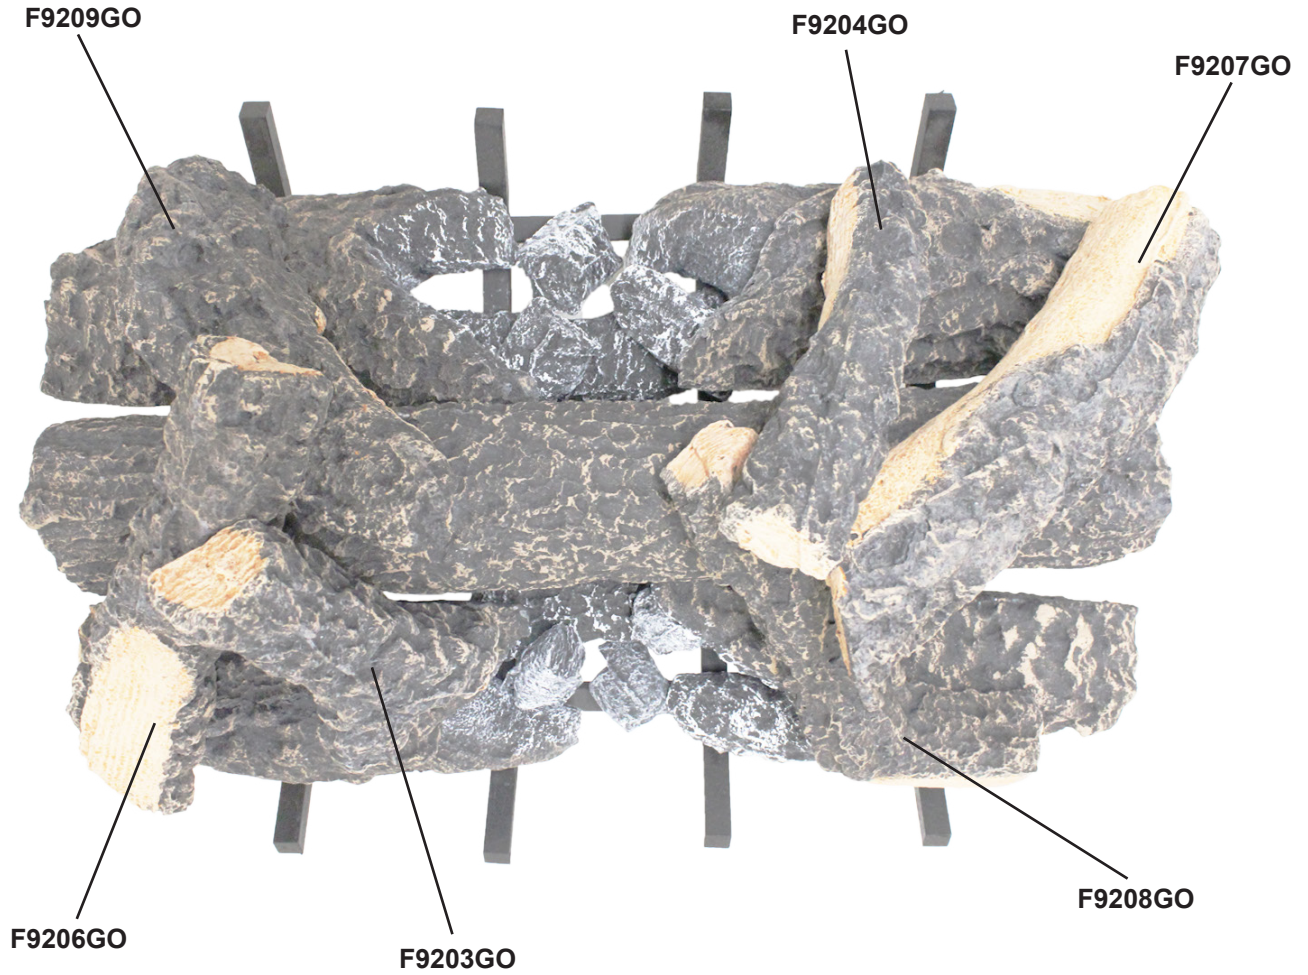




# WOODLAND TIMBERS

## SEE-THRU LOG DIAGRAM

WTS3029ST

Step 1


(Top View)

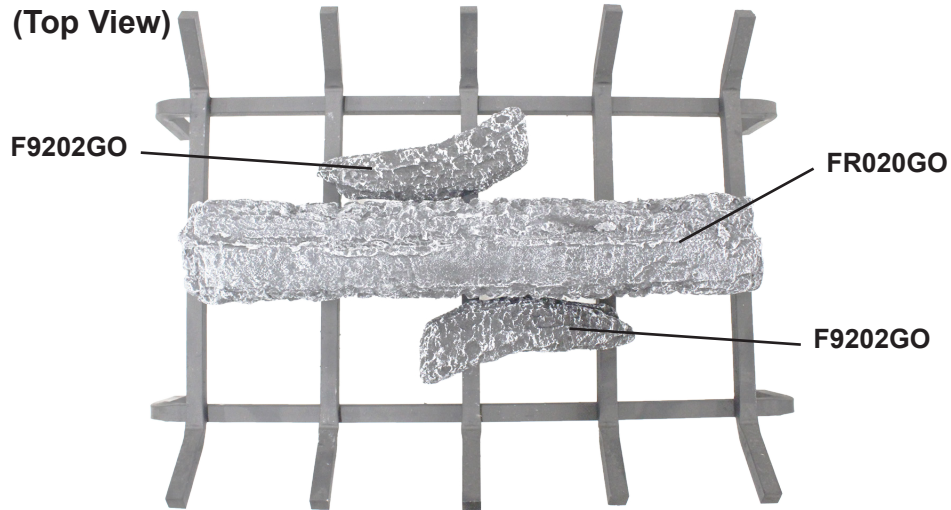

Step 2

(Front View)



(Back View)

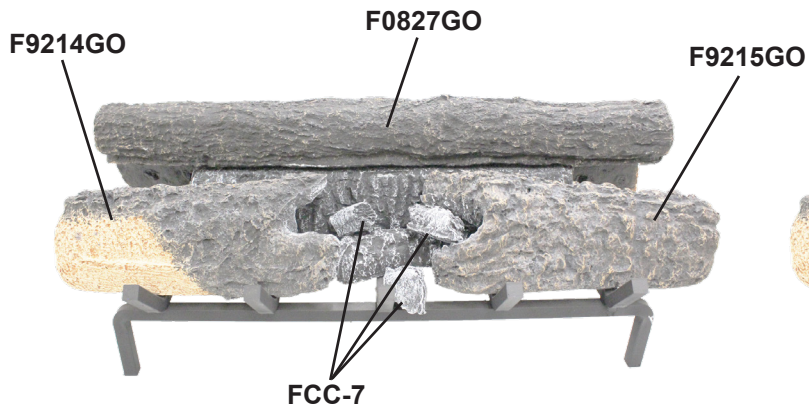

Step 3

(Front View)

(Back View)

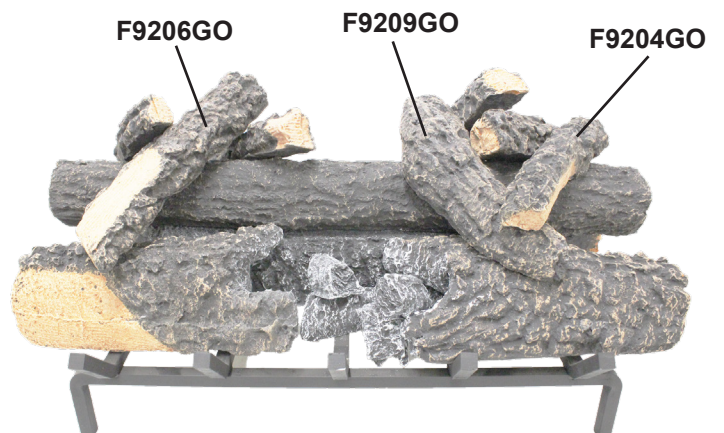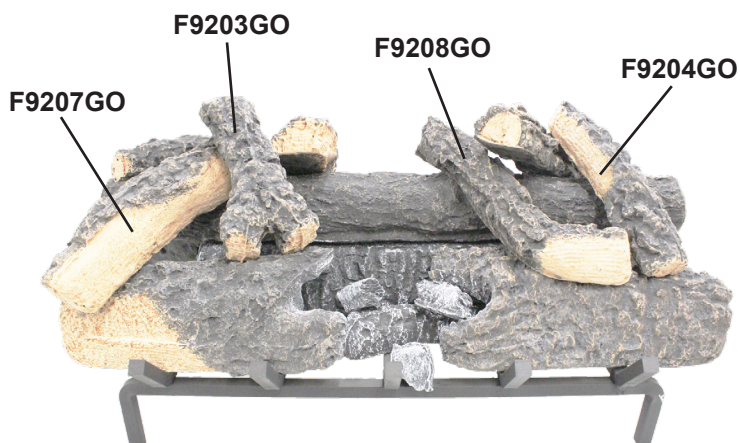


# WOODLAND TIMBERS

## SEE-THRU LOG DIAGRAM

WTS3029ST

Final

(Top View)

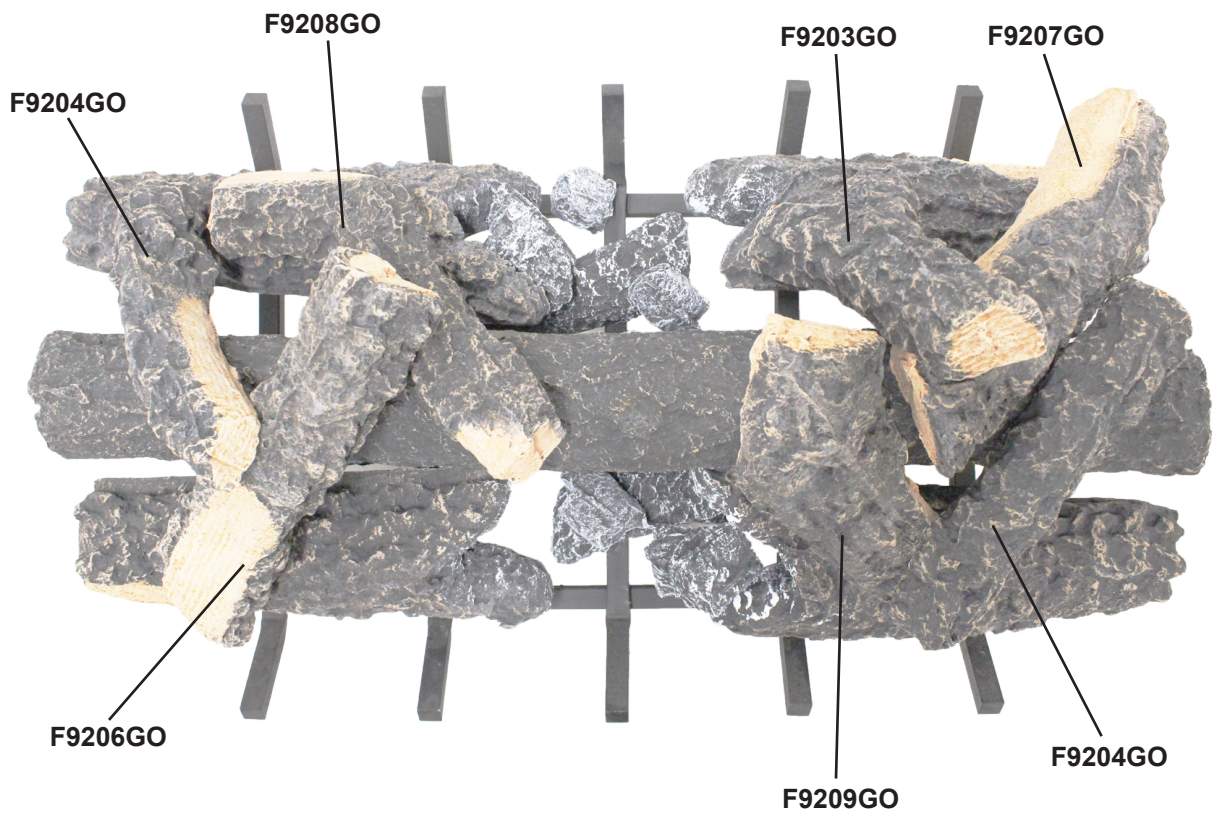




# WOODLAND TIMBERS

## SEE-THRU LOG DIAGRAM

WTS3633ST

Step 1


(Top View)

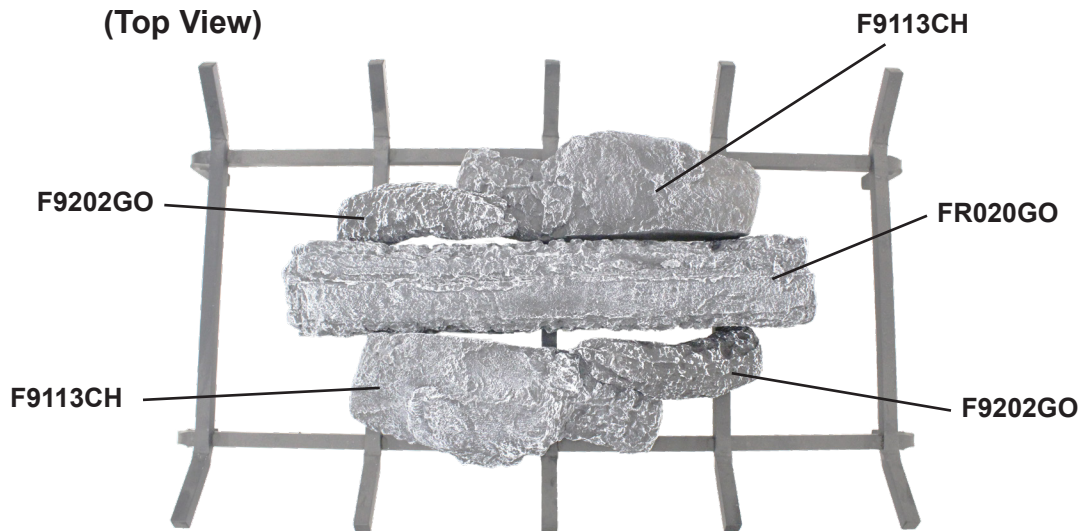

Step 2

(Front View)


(Back View)

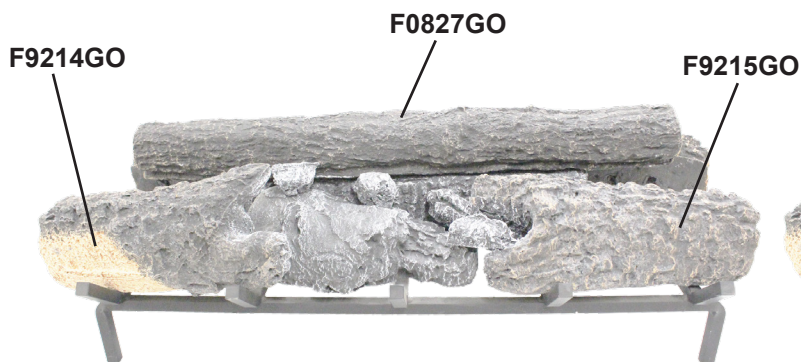

Step 3

(Front View)

(Back View)

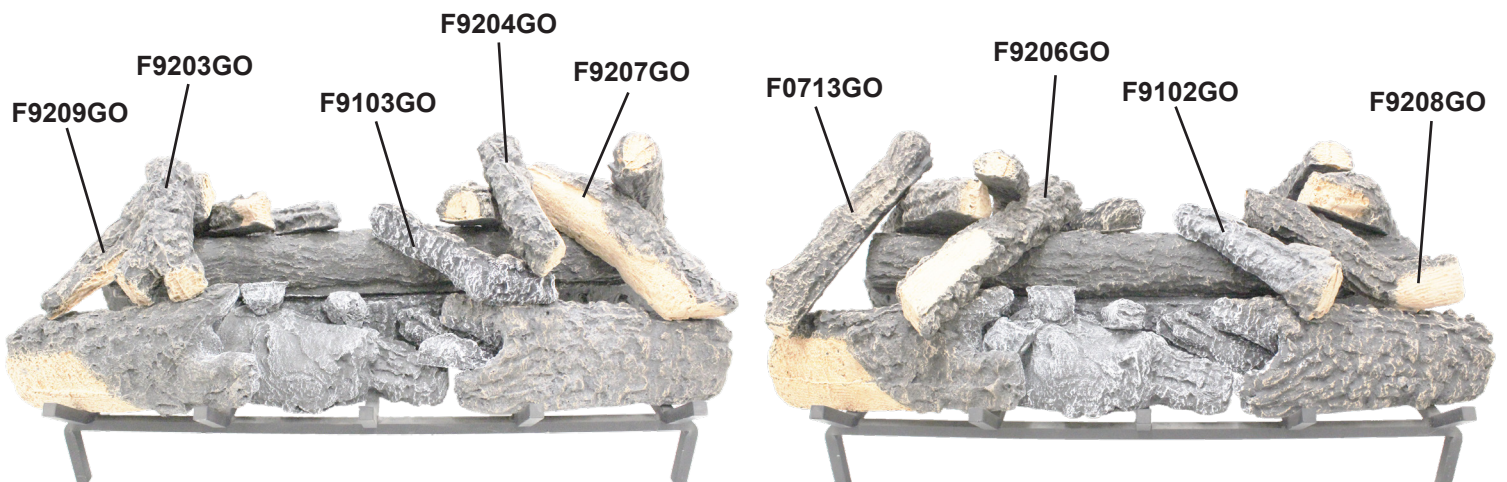


# WOODLAND TIMBERS

## SEE-THRU LOG DIAGRAM

WTS3633ST

Final

(Top View)

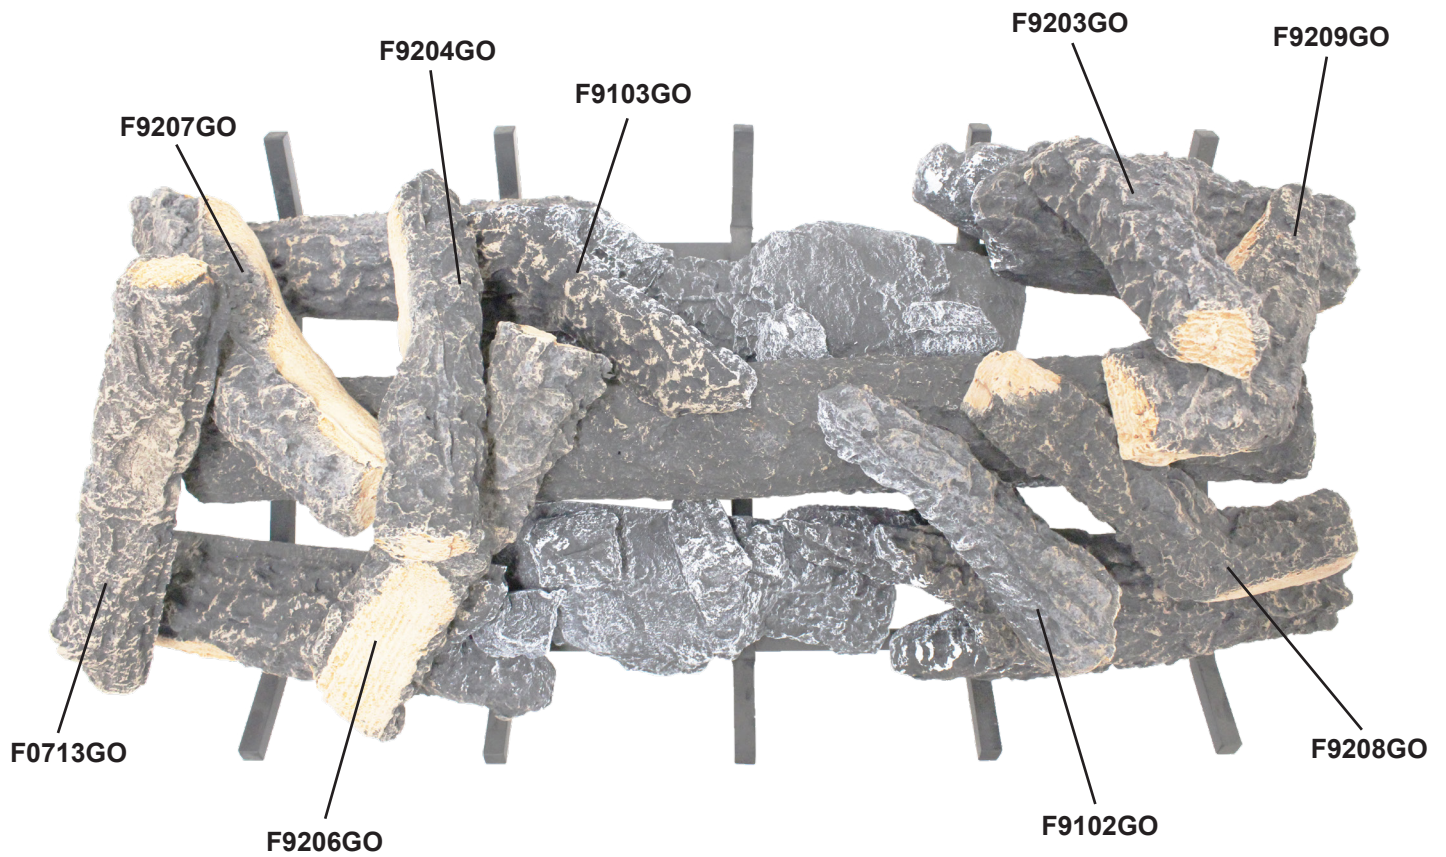



# WOODLAND TIMBERS

## INDIVIDUAL LOG DIAGRAM

**F0713GO**




**F1509GO**



**F9102GO**



**F9103GO**

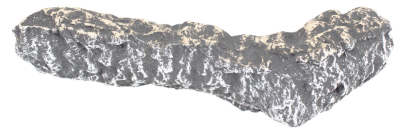

**F9113CH**



**F9202GO**



**F9203GO**



**F9204GO**



**F9206GO**



**F9207GO**



# WOODLAND TIMBERS

## INDIVIDUAL LOG DIAGRAM

F9208GO



F9209GO



F9210GO



F9211GO



F9212GO



F9213GO




F9214GO



F9215GO



F0017GO

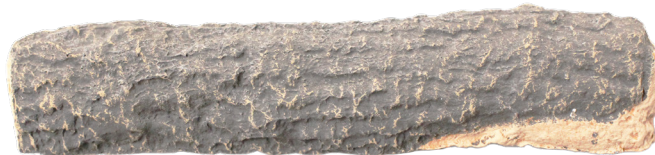

F2522GO





# WOODLAND TIMBERS

## INDIVIDUAL LOG DIAGRAM

F0822GO



F0827GO



FR018GO



FR020GO



FR024GO



FR030GO



FR036GO

