

ASPEN TIMBERS


SEE-THRU LOG DIAGRAM

ATS1820ST

Step 1

(Top View)

(Front View)

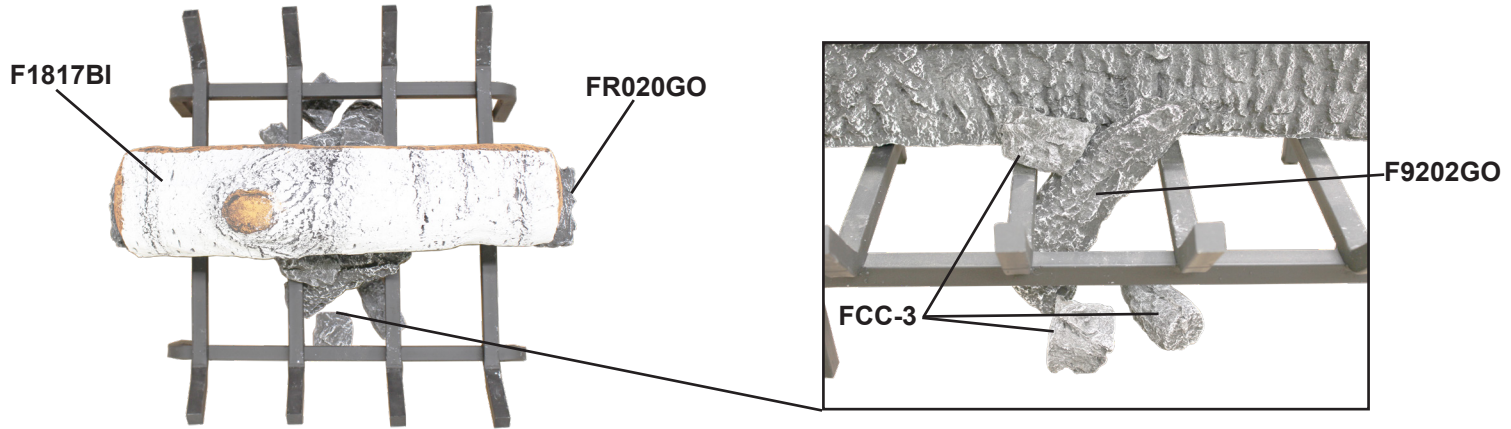

Step 2

(Front View)

(Back View)



Step 3

(Front View)

(Back View)



072320

ASPEN TIMBERS

SEE-THRU LOG DIAGRAM

ATS2120ST

Final


(Top View)



ASPEN TIMBERS

INDIVIDUAL LOG DIAGRAM

F1801BI

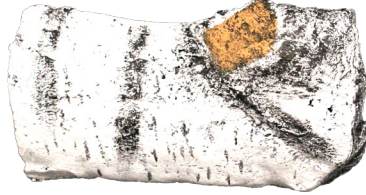

F1802BI



F1803BI




F1804BI




F1805BI



F1806BI

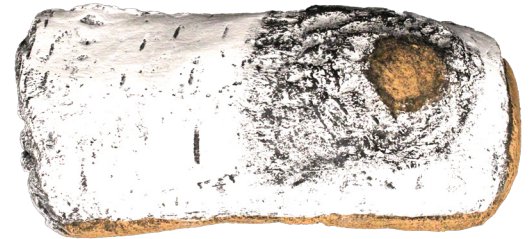

F1807BI

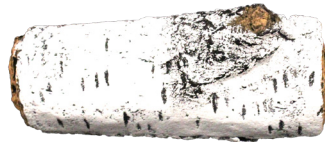

F1808BI




F1811BI



F1812BI



F1813BI

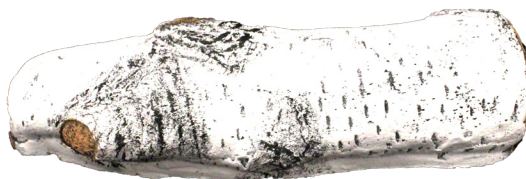

F1814BI



ASPEN TIMBERS

INDIVIDUAL LOG DIAGRAM

F1815BI




F1817BI



F1820BI



F1824BI

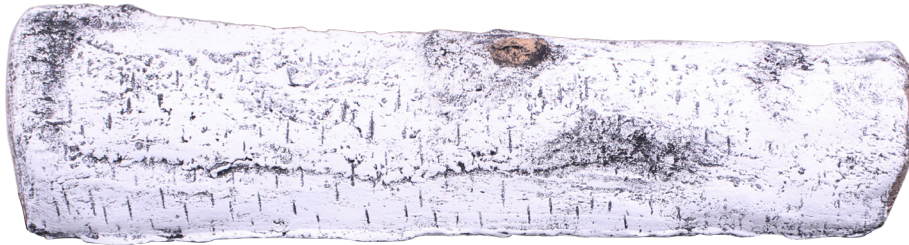

FR018GO



FR020GO



FR024GO



FR030GO



FR036GO



F9202GO



ASPEN TIMBERS



SEE-THRU LOG DIAGRAM

ATS2421ST

Step 1

(Top View)



(Front View)

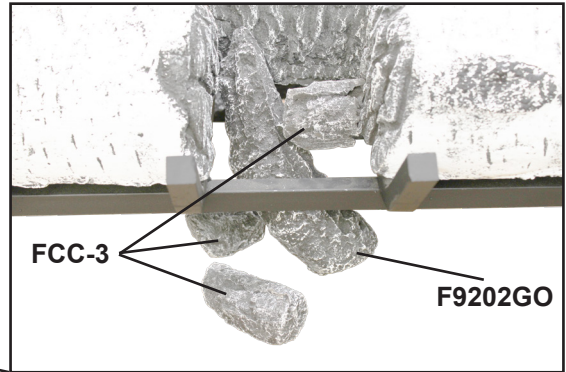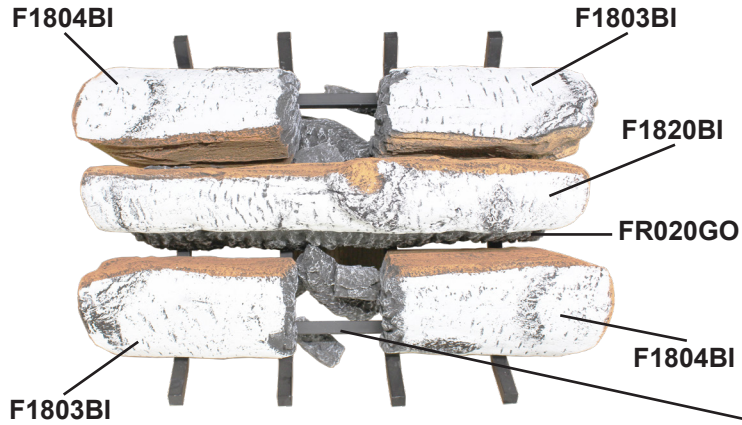

Step 2

(Front View)

(Back View)

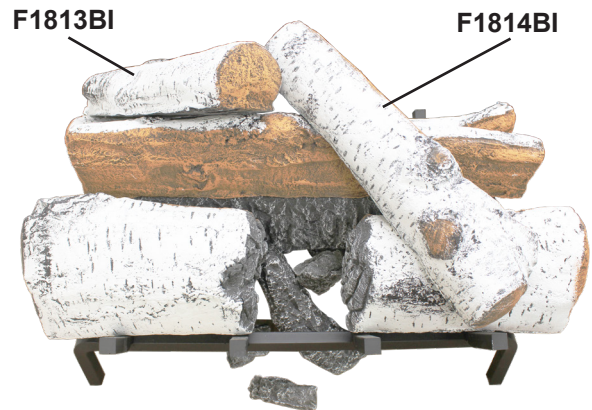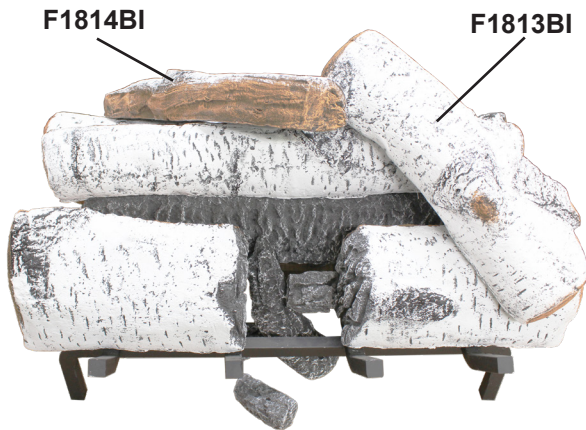

Step 3

(Front View)

(Back View)



072320


ASPEN TIMBERS

SEE-THRU LOG DIAGRAM

ATS2421ST

Final


(Top View)

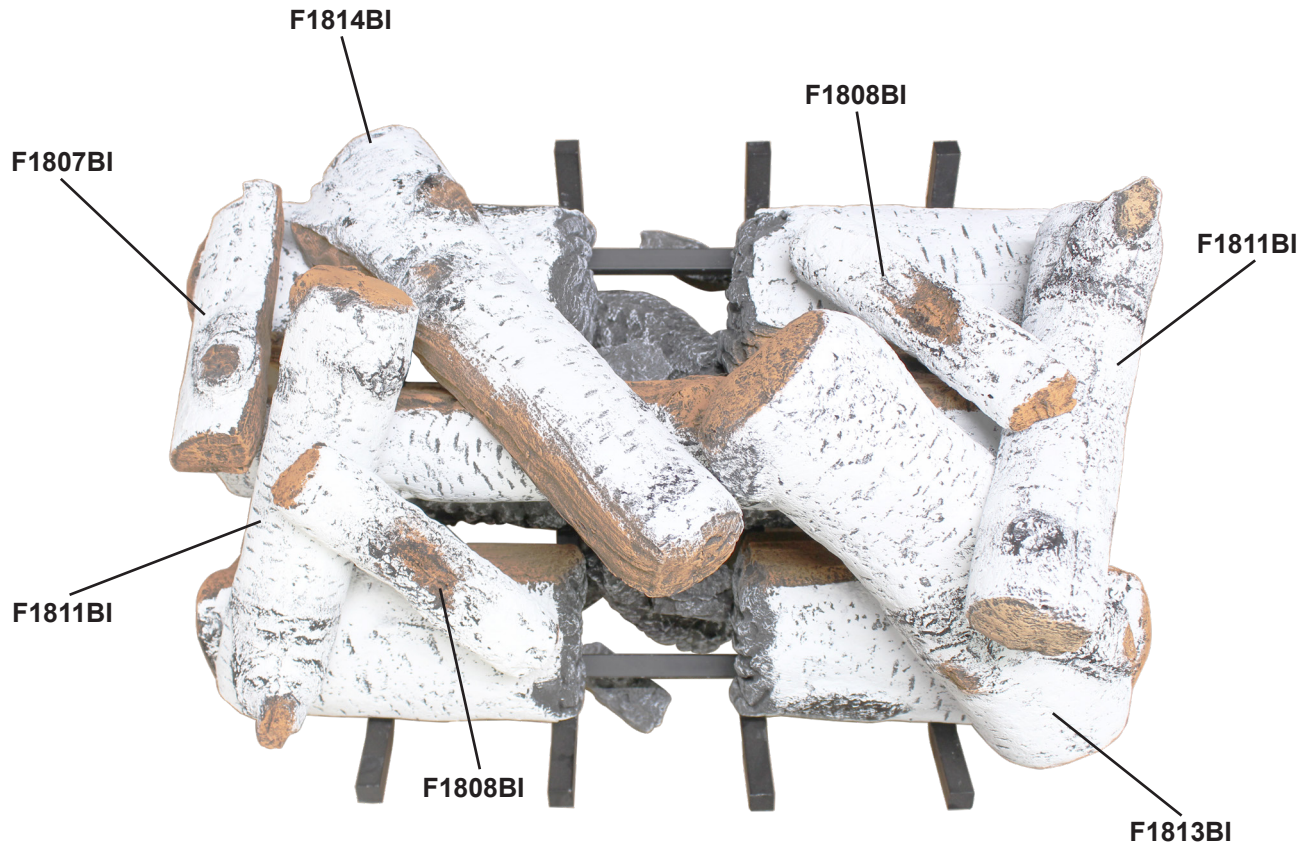

ASPEN TIMBERS

INDIVIDUAL LOG DIAGRAM

F1801BI

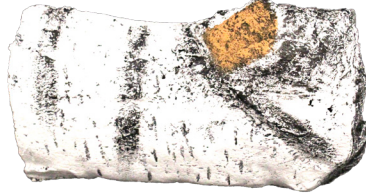

F1802BI



F1803BI




F1804BI




F1805BI



F1806BI

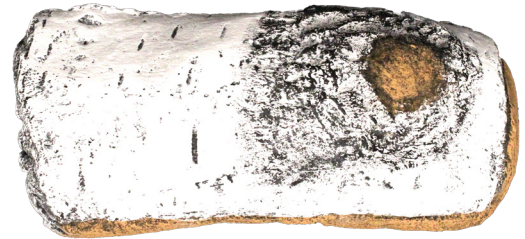

F1807BI

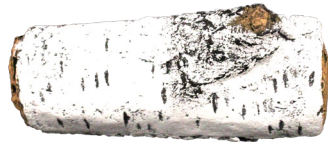

F1808BI




F1811BI



F1812BI



F1813BI

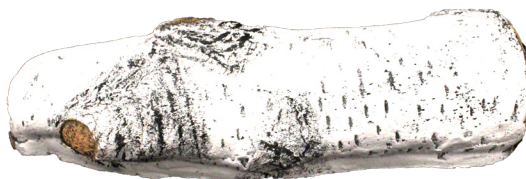

F1814BI



ASPEN TIMBERS

INDIVIDUAL LOG DIAGRAM

F1815BI




F1817BI



F1820BI



F1824BI

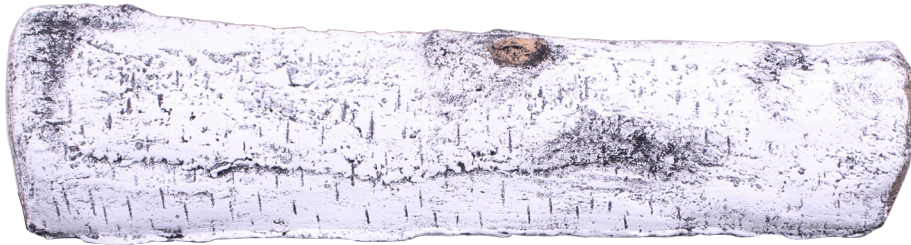

FR018GO



FR020GO



FR024GO



FR030GO



FR036GO



F9202GO



ASPEN TIMBERS



SEE-THRU LOG DIAGRAM

ATS3022ST

Step 1

(Top View)

(Front View)

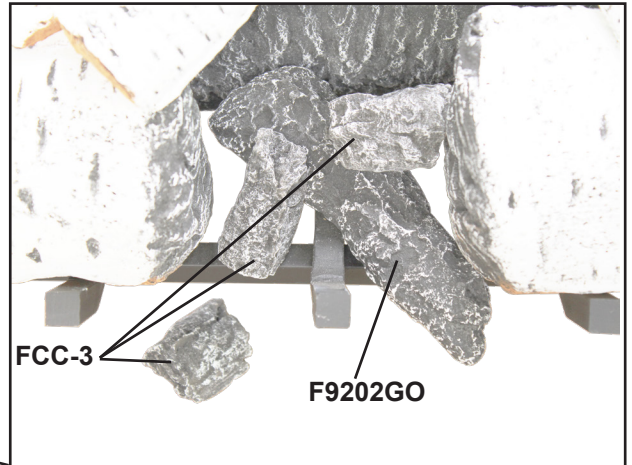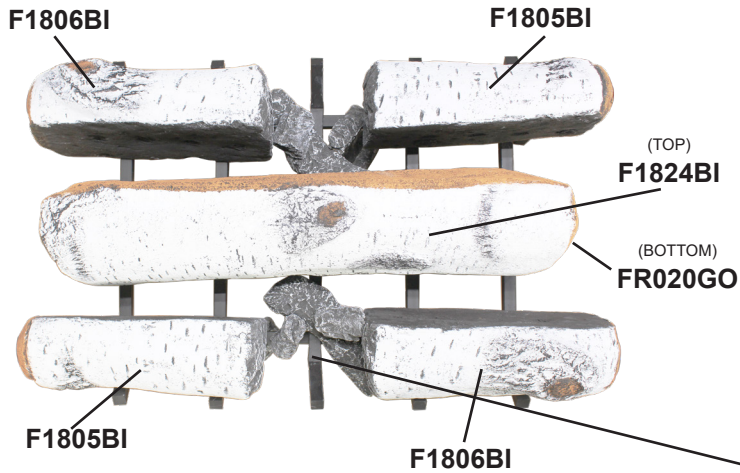

Step 2

(Front View)


(Back View)



Step 3

(Front View)

(Back View)

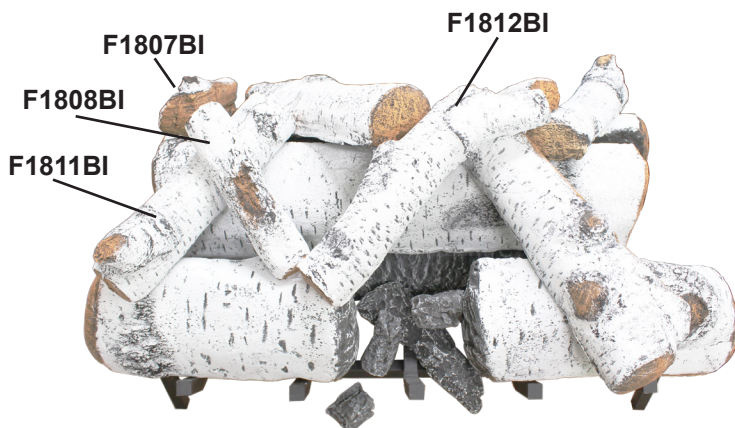

072820


ASPEN TIMBERS

SEE-THRU LOG DIAGRAM

ATS3022ST

Final


(Top View)

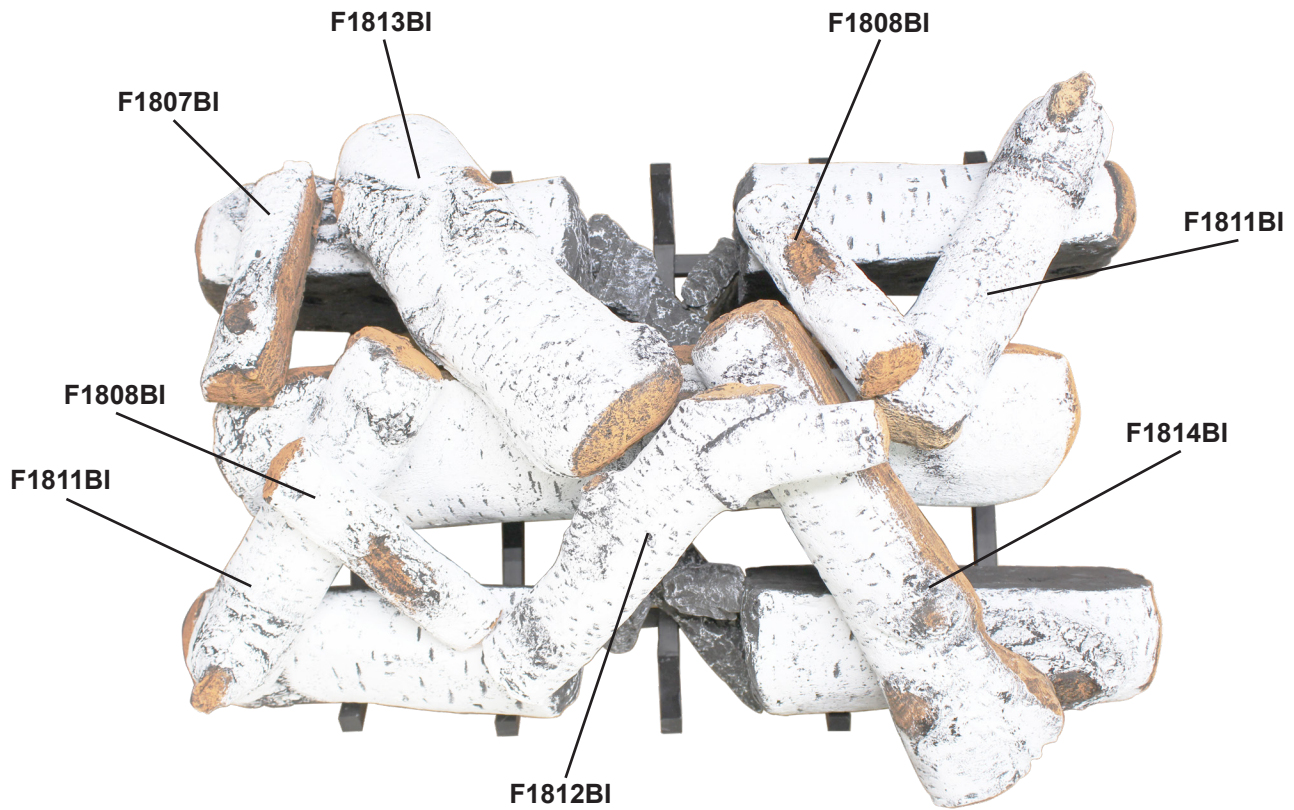

ASPEN TIMBERS

INDIVIDUAL LOG DIAGRAM

F1801BI

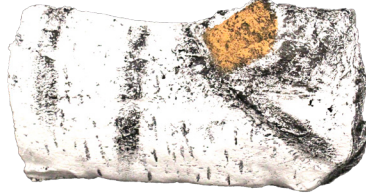

F1802BI



F1803BI




F1804BI




F1805BI



F1806BI

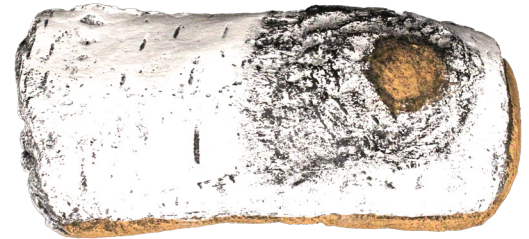

F1807BI

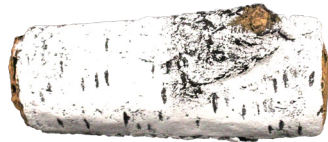

F1808BI




F1811BI



F1812BI



F1813BI

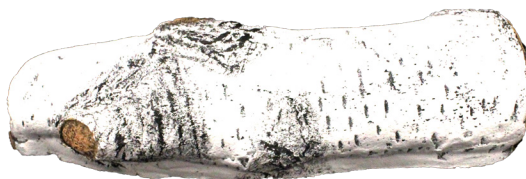

F1814BI



ASPEN TIMBERS

INDIVIDUAL LOG DIAGRAM

F1815BI




F1817BI



F1820BI



F1824BI

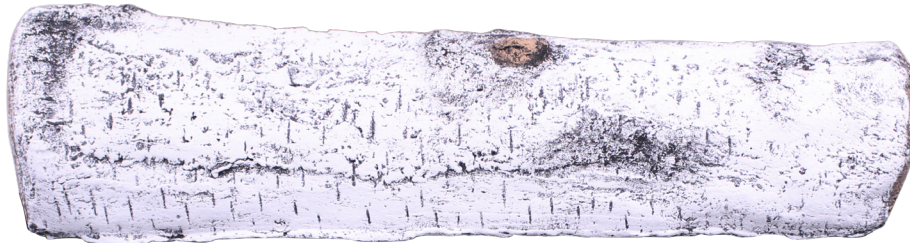

FR018GO



FR020GO



FR024GO



FR030GO



FR036GO



F9202GO



ASPEN TIMBERS



SEE-THRU LOG DIAGRAM

ATS3623ST

Step 1

(Top View)



(Front View)

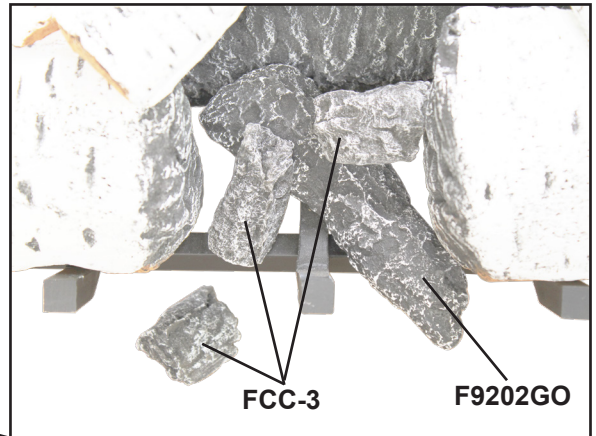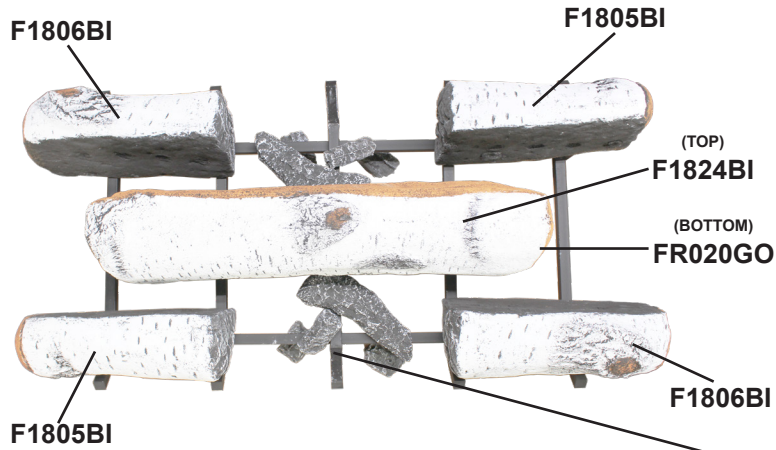

Step 2

(Front View)

(Back View)

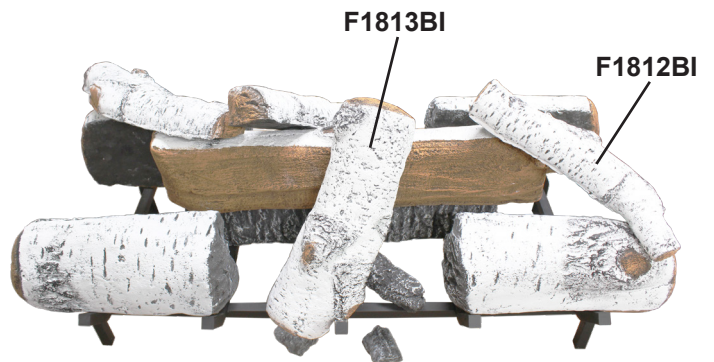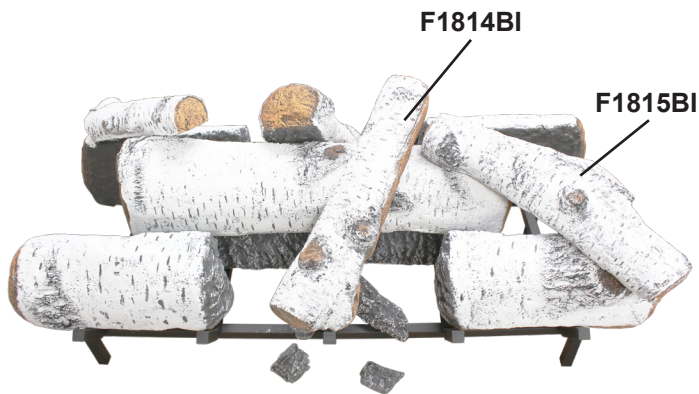

Step 3

(Front View)

(Back View)



073020


ASPEN TIMBERS

SEE-THRU LOG DIAGRAM

ATS3623ST

Final


(Top View)

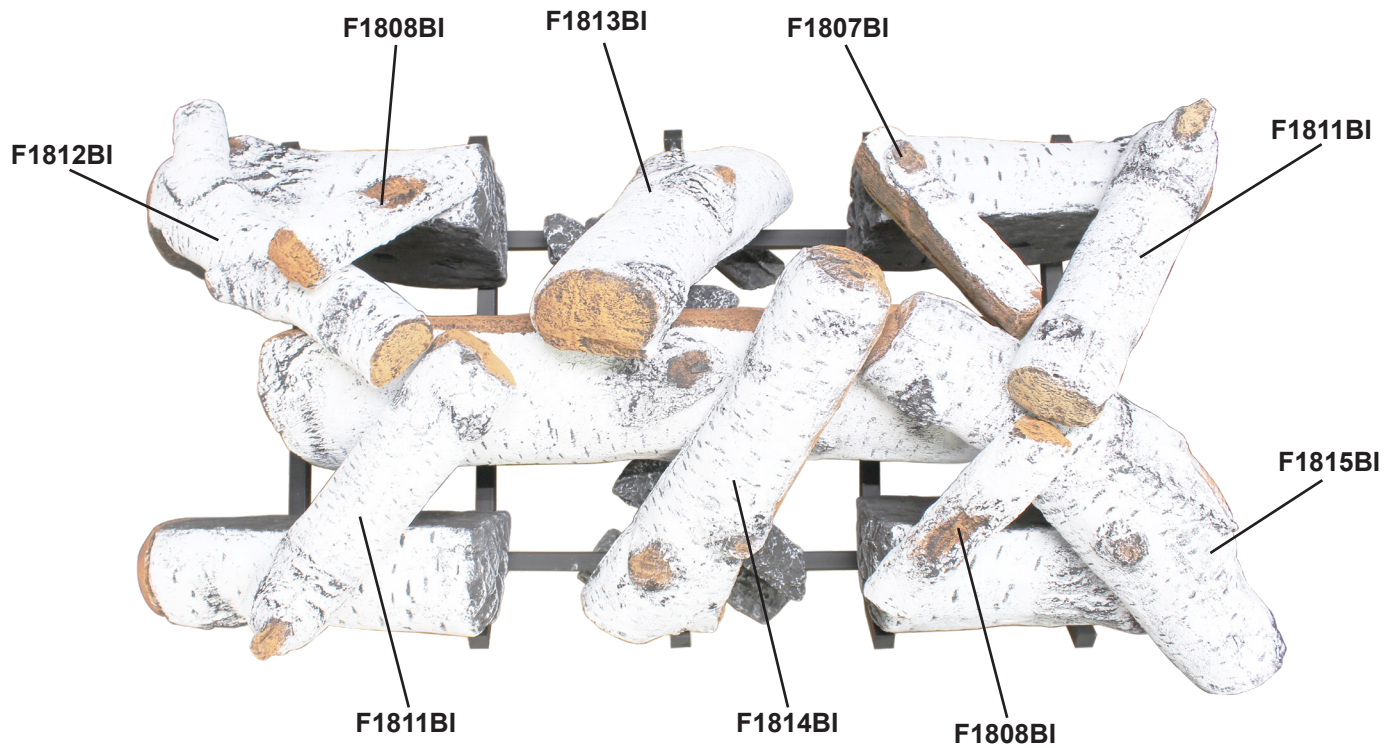

ASPEN TIMBERS

INDIVIDUAL LOG DIAGRAM

F1801BI

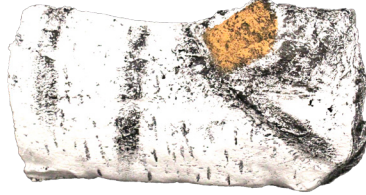

F1802BI



F1803BI




F1804BI




F1805BI



F1806BI

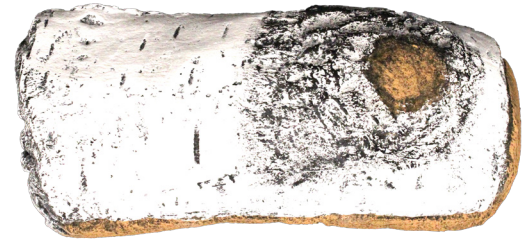

F1807BI

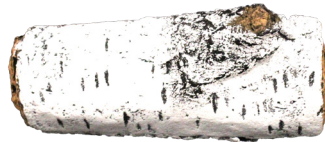

F1808BI




F1811BI



F1812BI



F1813BI

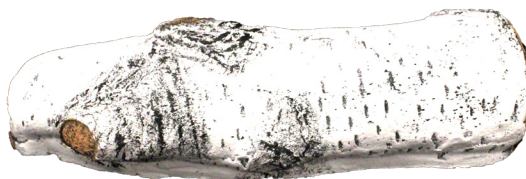

F1814BI



ASPEN TIMBERS

INDIVIDUAL LOG DIAGRAM

F1815BI




F1817BI



F1820BI



F1824BI

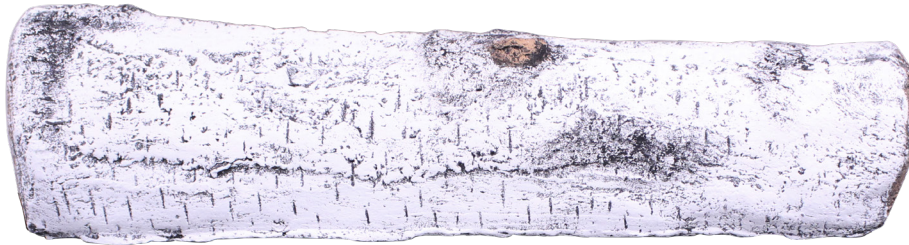

FR018GO



FR020GO



FR024GO



FR030GO



FR036GO



F9202GO

