

CROSS TIMBERS

SEE-THRU SHALLOW LOG DIAGRAM

CTS1811SS


Step 1 (Top View)



Step 2 (Front View)



(Back View)

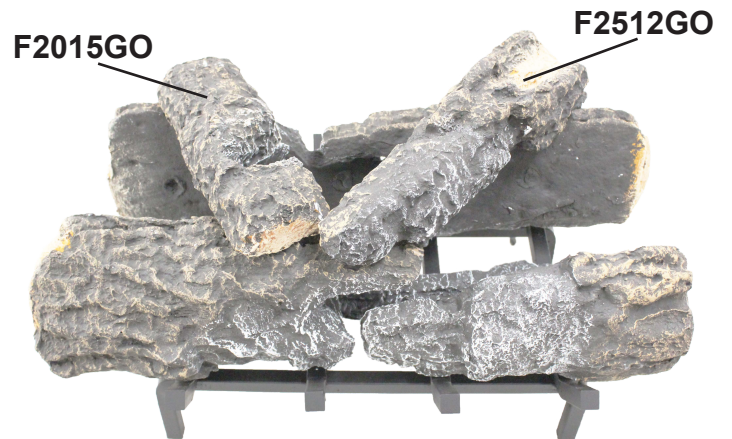

Step 3 (Front View)



(Back View)



CROSS TIMBERS

SEE-THRU SHALLOW LOG DIAGRAM

CTS2111SS

Final

(Top View)

F1509GO

F2012GO

F0713GO

F2512GO

F2015GO




CROSS TIMBERS

SEE-THRU SHALLOW LOG DIAGRAM

CTS2412SS

Step 1


(Top View)

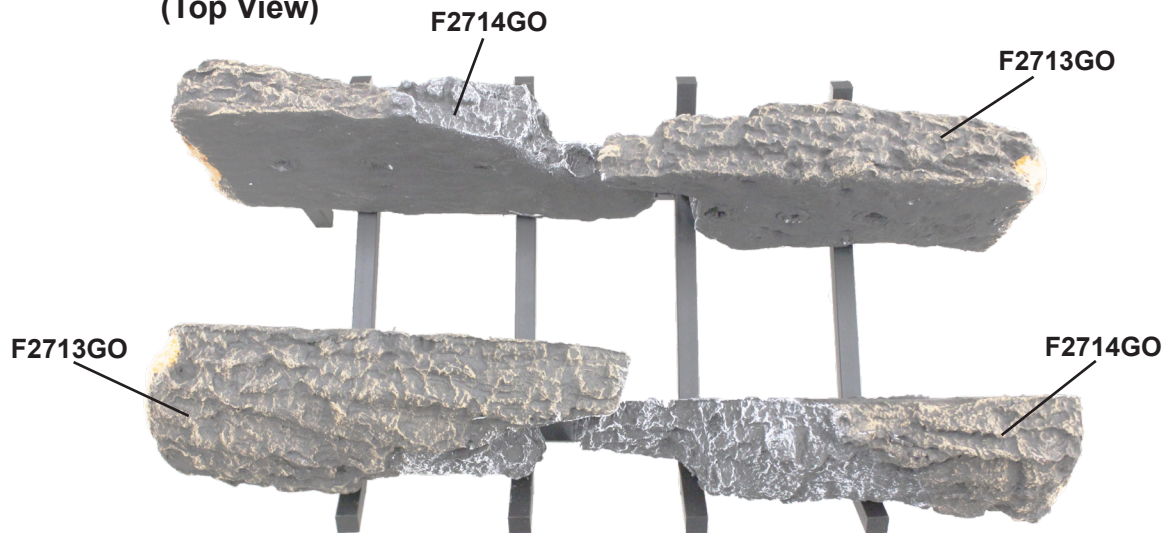

Step 2

(Front View)


(Back View)

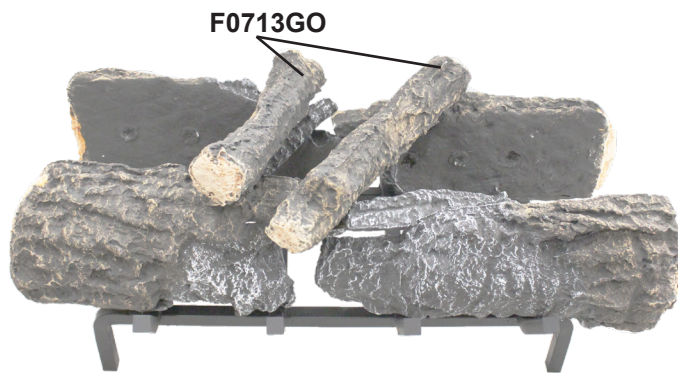

Step 3

(Front View)

(Back View)

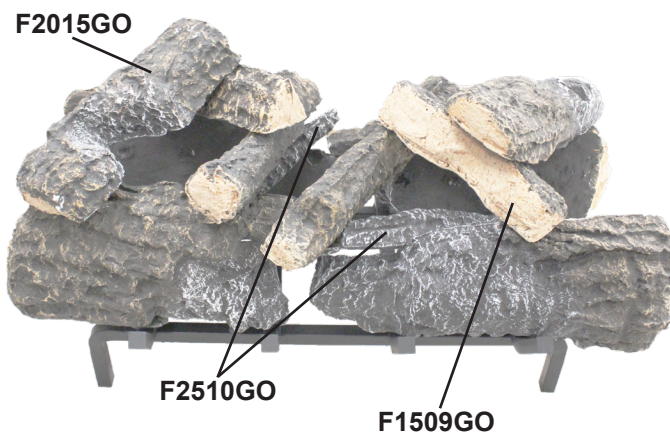


CROSS TIMBERS

SEE-THRU SHALLOW LOG DIAGRAM

CTS2412SS

Final

(Top View)

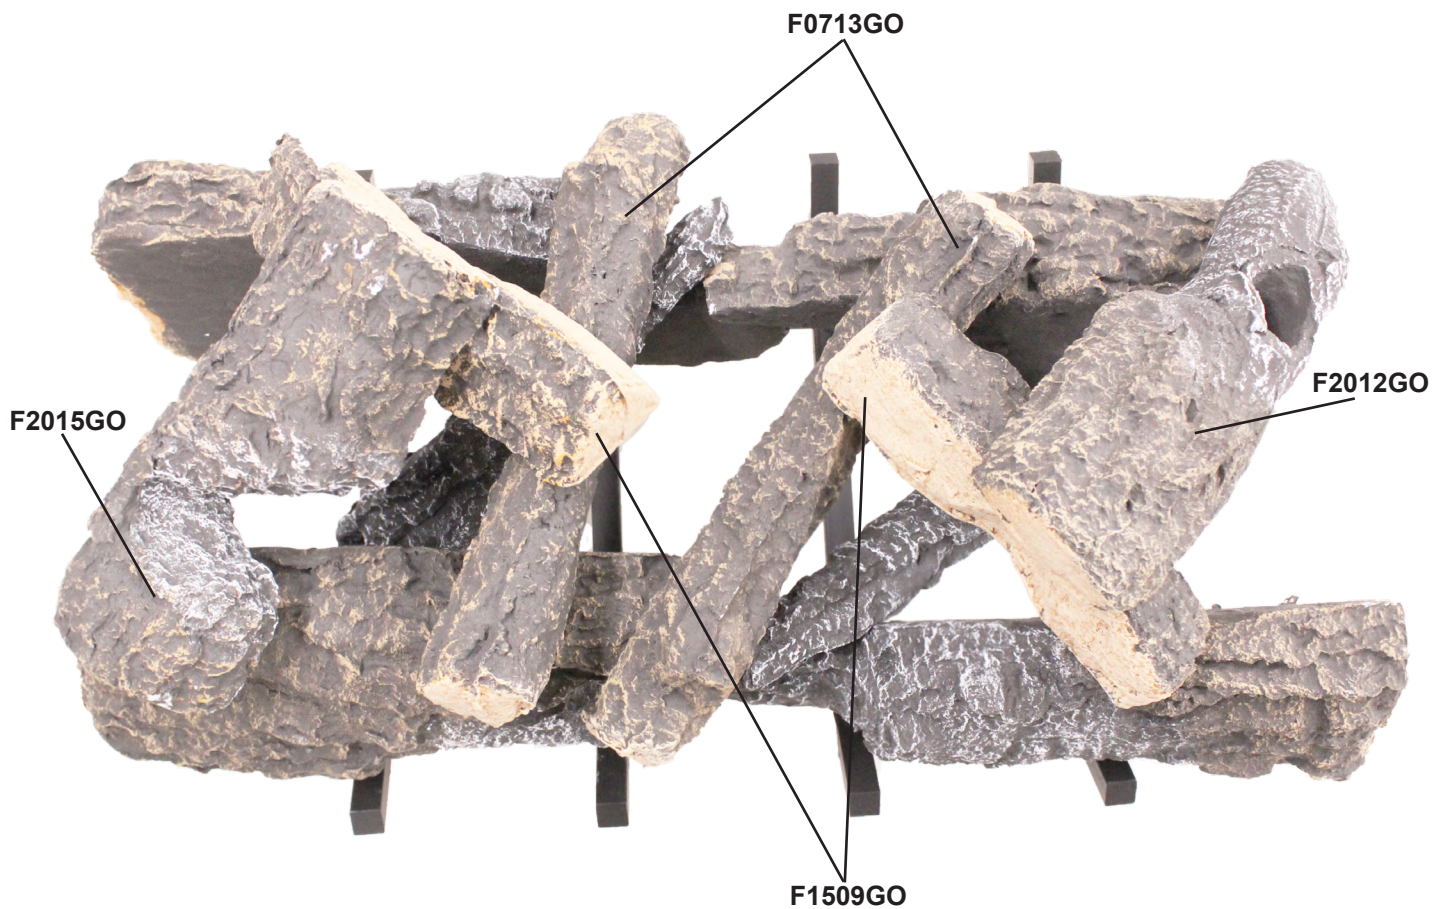


CROSS TIMBERS

SEE-THRU SHALLOW LOG DIAGRAM

CTS3013SS

Step 1



(Top View)

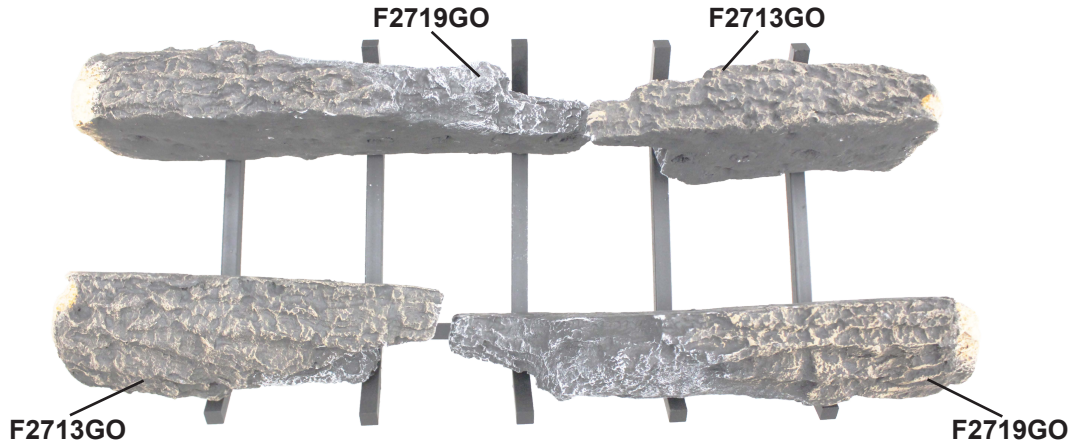

Step 2

(Front View)


(Back View)

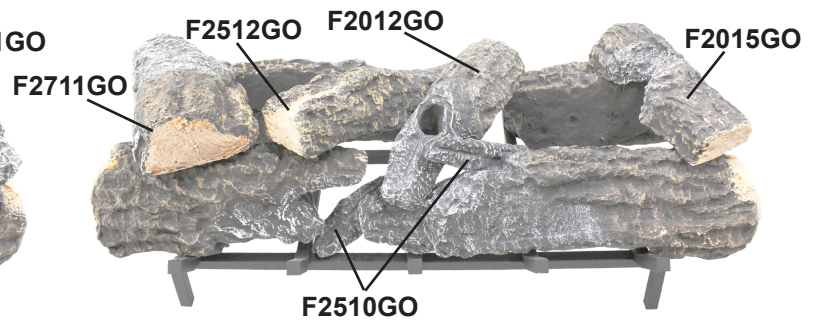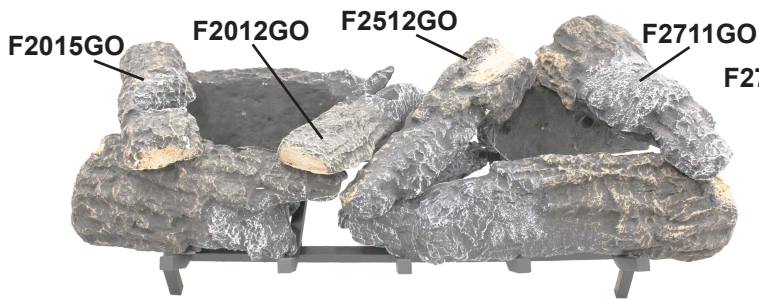

Step 3

(Front View)

(Back View)

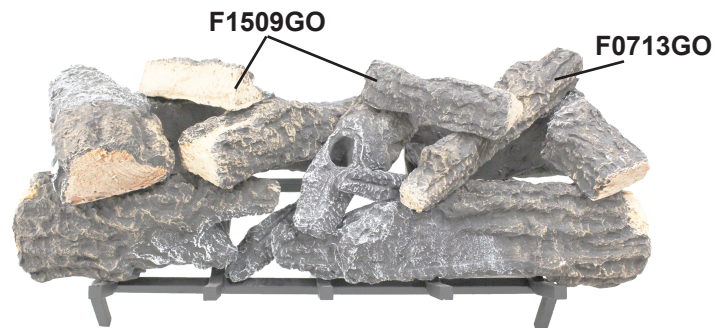


CROSS TIMBERS

SEE-THRU SHALLOW LOG DIAGRAM

CTS3013SS

Final

(Top View)

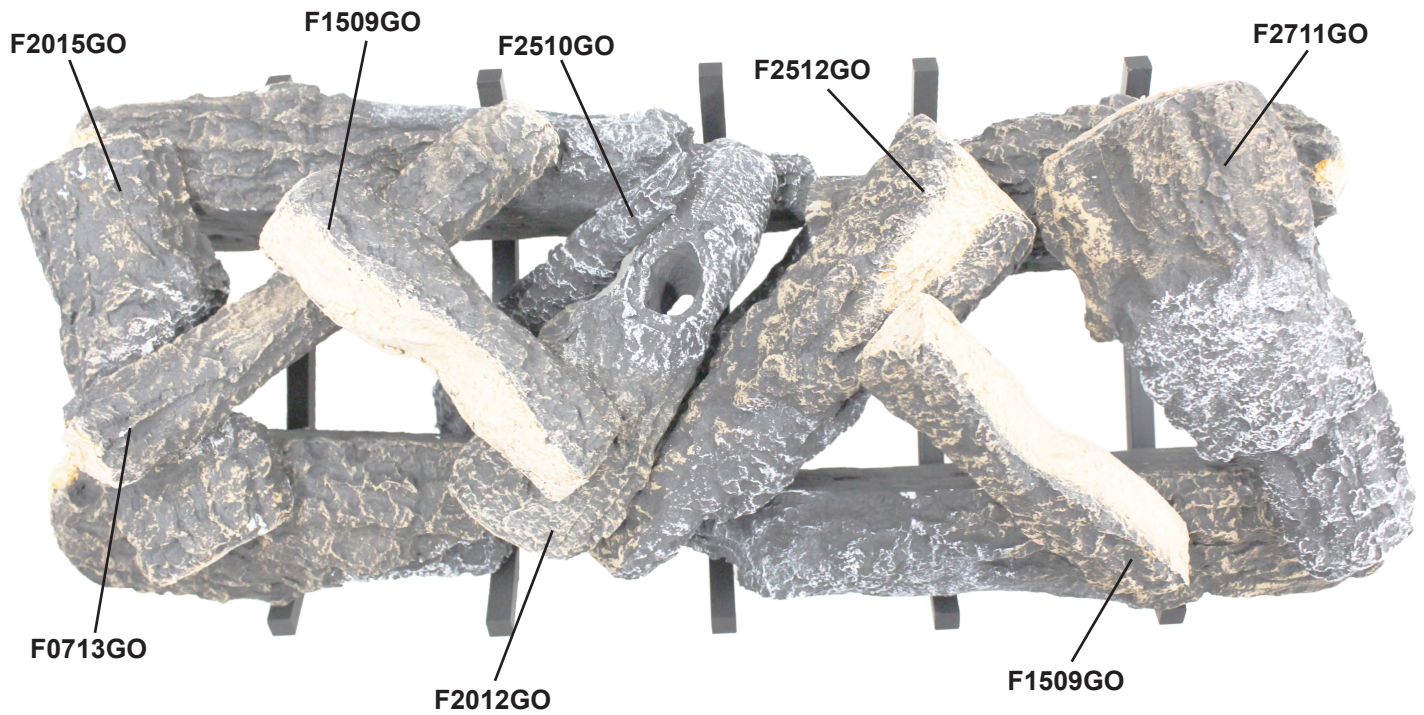

CROSS TIMBERS

INDIVIDUAL

LOG DIAGRAM

F0713GO



F1509GO



F2012GO



F2015GO



F2510GO



F2512GO



F2710GO



F2713GO




F2714GO



F2719GO



F0017GO

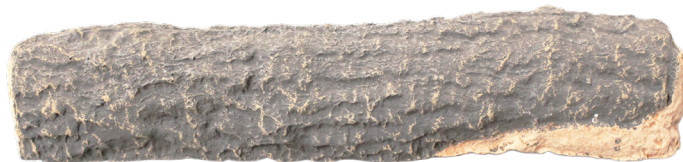

CROSS TIMBERS

INDIVIDUAL

LOG DIAGRAM

F2522GO



F0822GO



FR018GO



FR020GO



FR024GO



FR030GO



FR036GO

