

# WOODLAND TIMBERS

SEE-THRU SHALLOW

WTS1818SS

LOG DIAGRAM

Step 1


(Top View)



Step 2

(Front View)


(Back View)

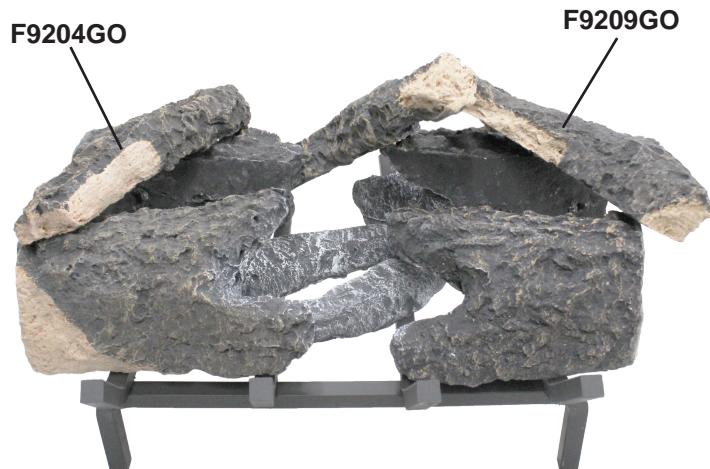

Step 3

(Front View)

(Back View)

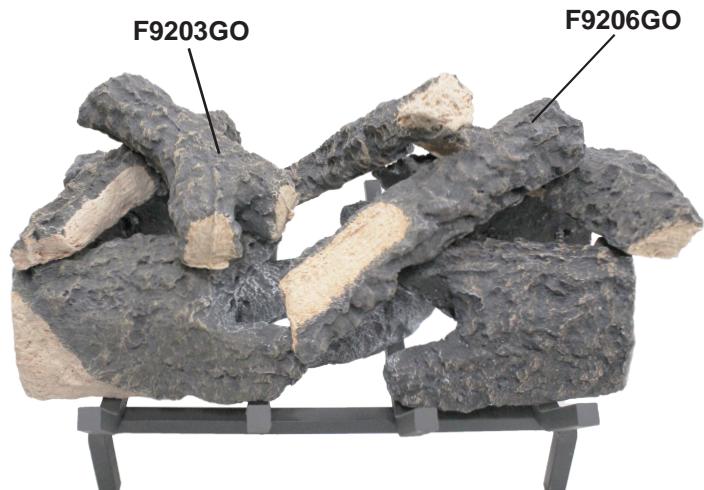

040323

# WOODLAND TIMBERS


## SEE-THRU SHALLOW

### WTS2118SS

### LOG DIAGRAM

Final

(Top View)

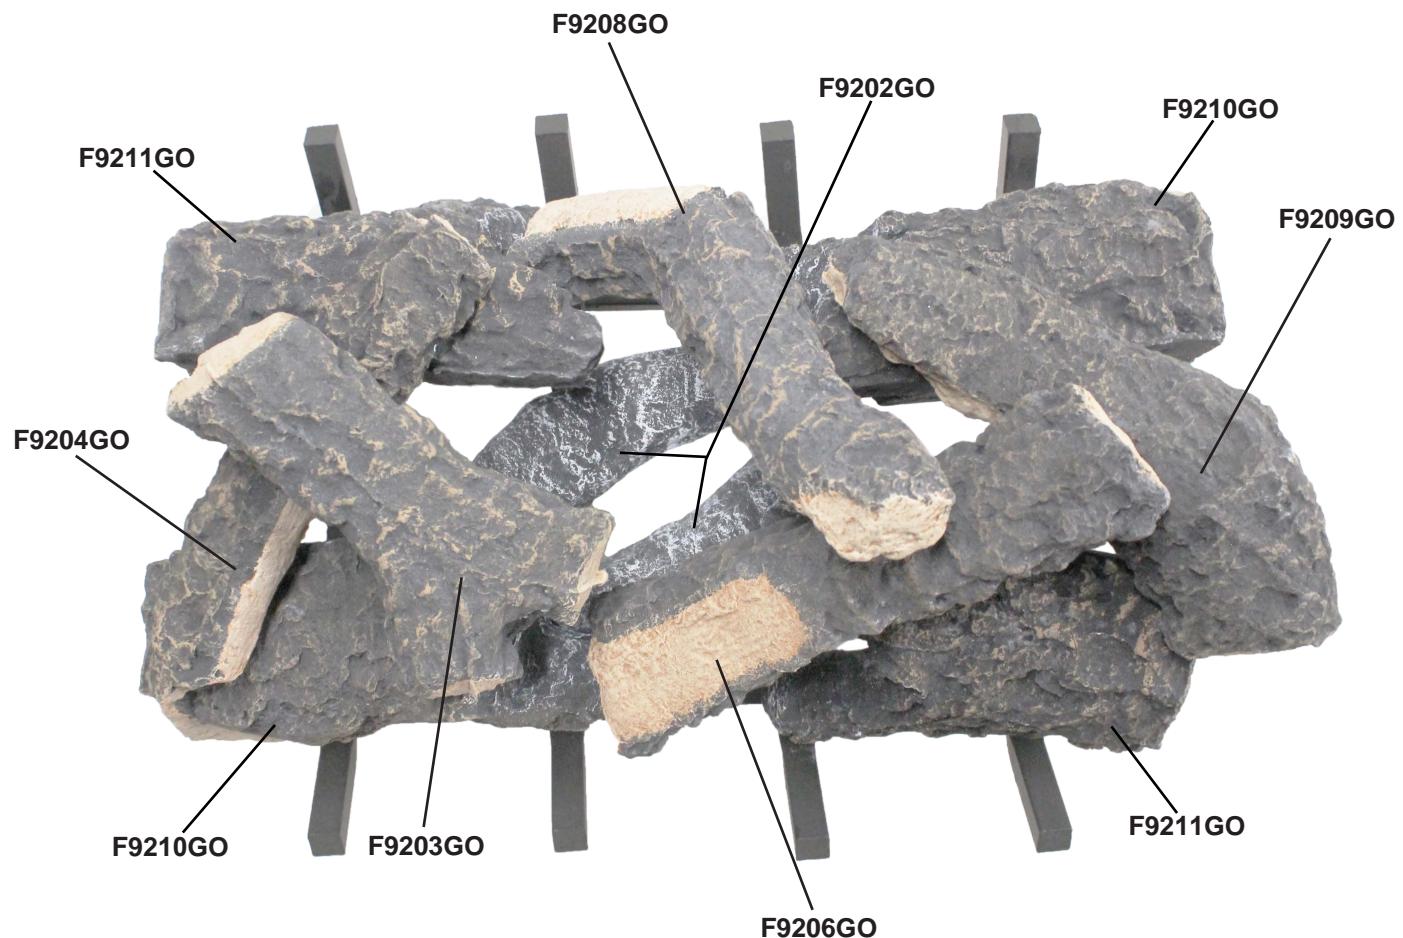

# WOODLAND TIMBERS

SEE-THRU SHALLOW

WTS2419SS

LOG DIAGRAM

---

Step 1

(Top View)

F9202GO

F9213GO

F9212GO

F9212GO


F9213GO

F9202GO

Step 2

(Front View)

(Back View)

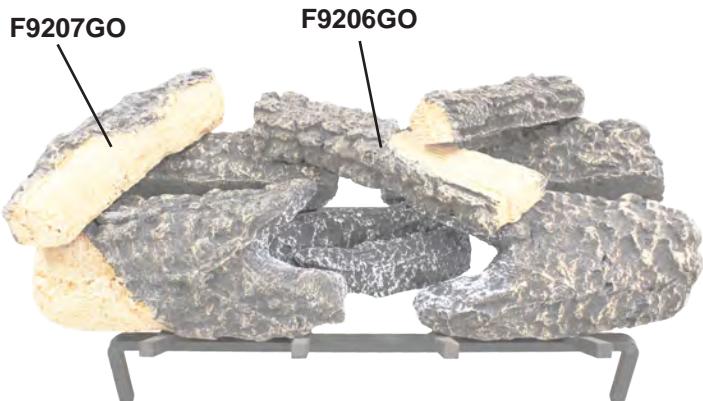


F9208GO



Step 3

(Front View)

(Back View)

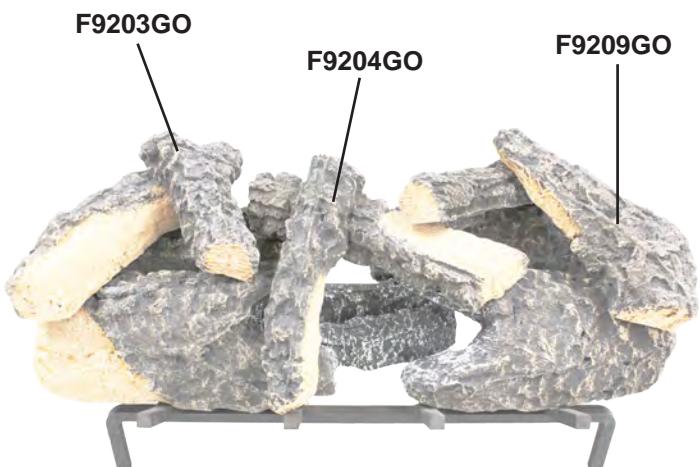

# WOODLAND TIMBERS

SEE-THRU SHALLOW


WTS2419SS

LOG DIAGRAM

---

Final

(Top View)

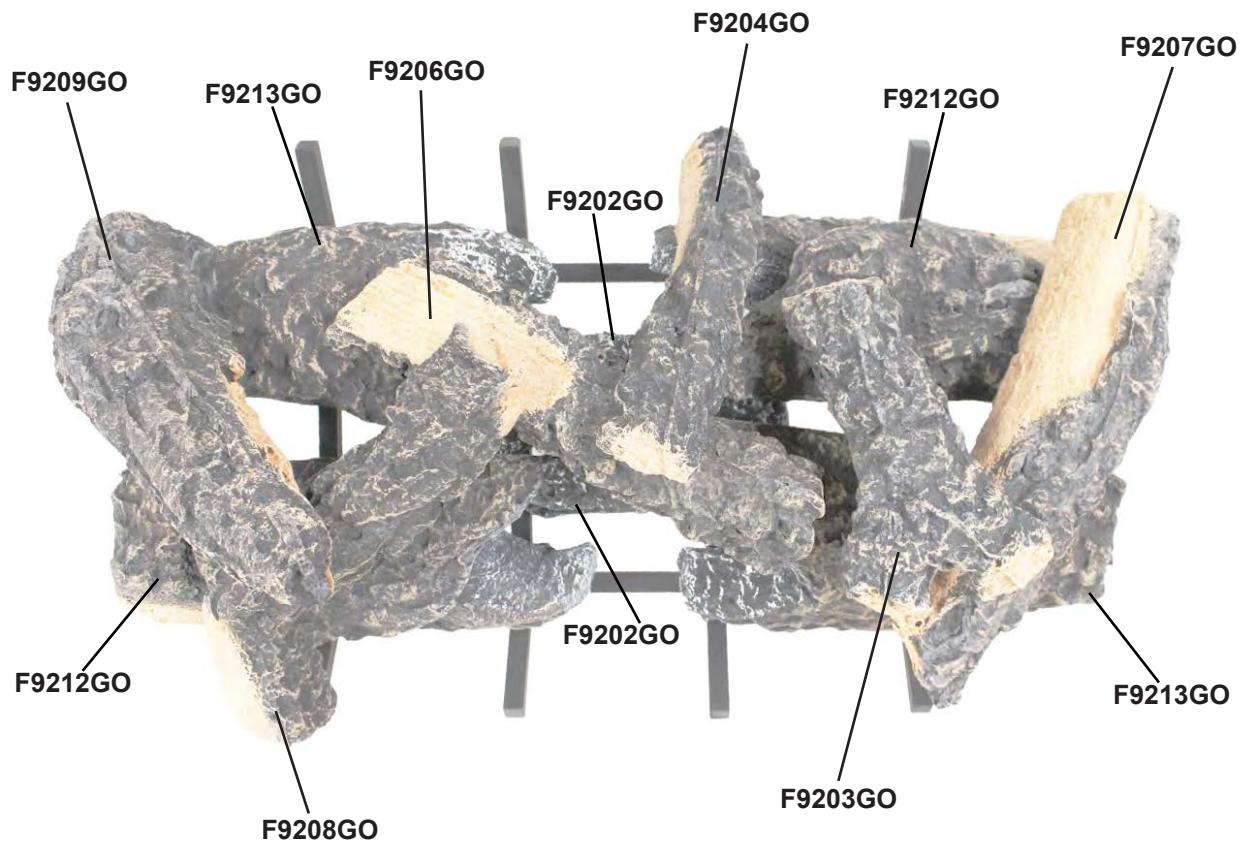

# WOODLAND TIMBERS

SEE-THRU SHALLOW


WTS3020SS

LOG DIAGRAM

---

Step 1



(Top View)

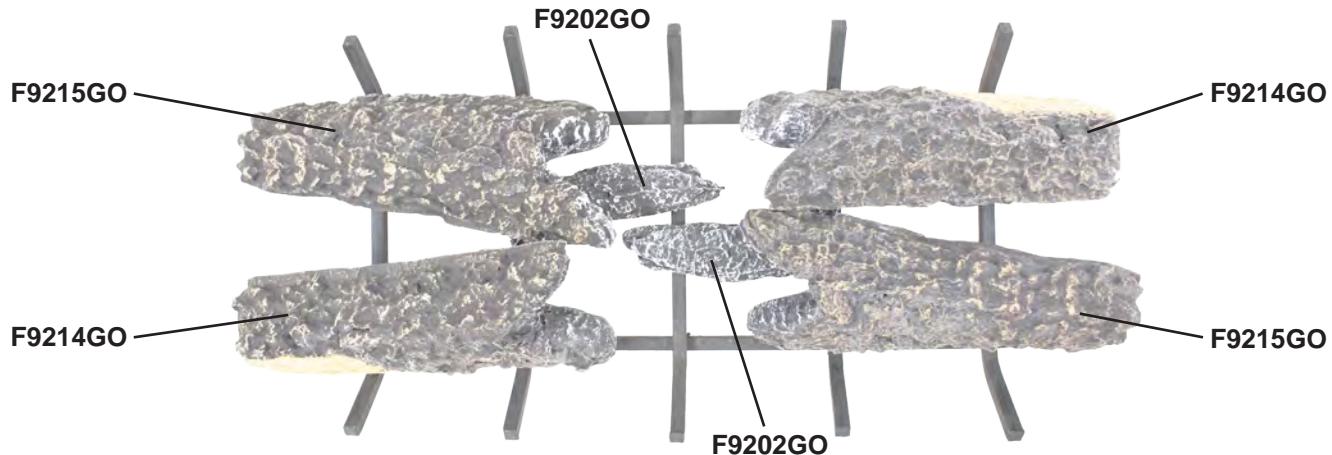

Step 2

(Front View)



(Back View)

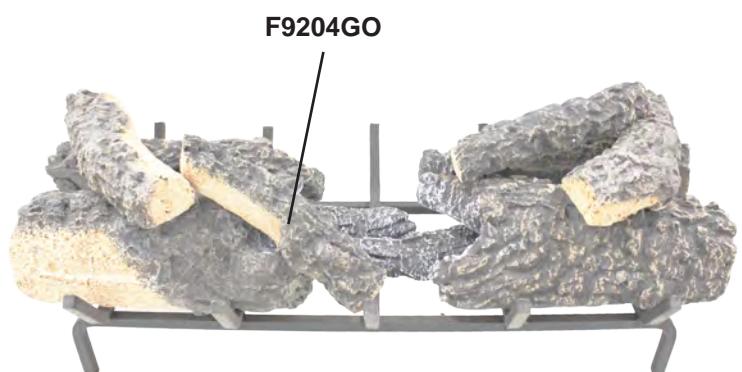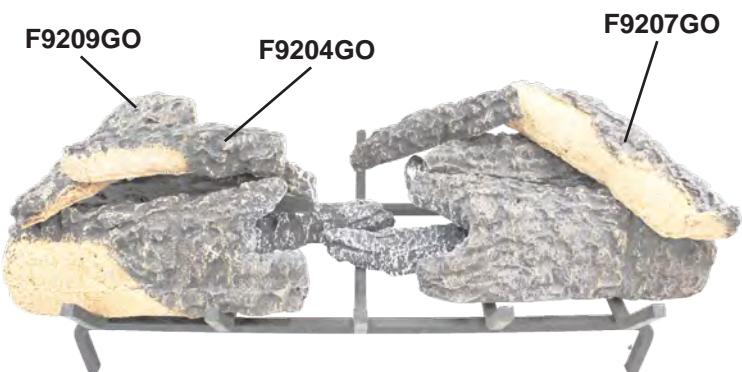

Step 3

(Front View)

(Back View)

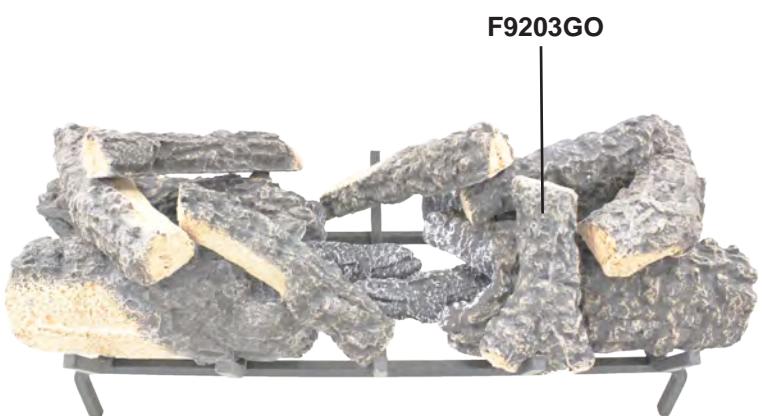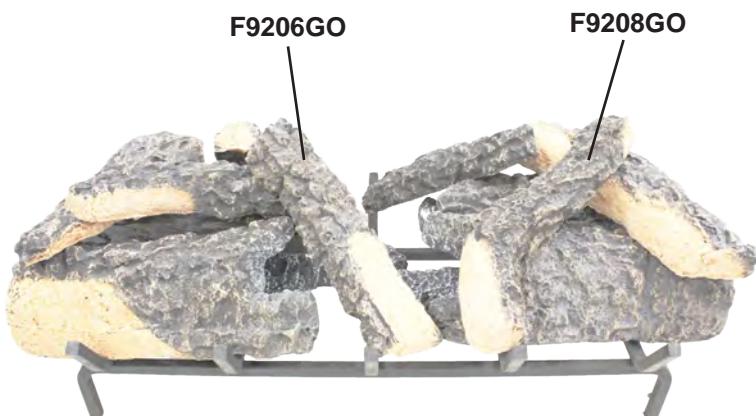

# WOODLAND TIMBERS

SEE-THRU SHALLOW


**WTS3020SS**

LOG DIAGRAM

---

Final

(Top View)

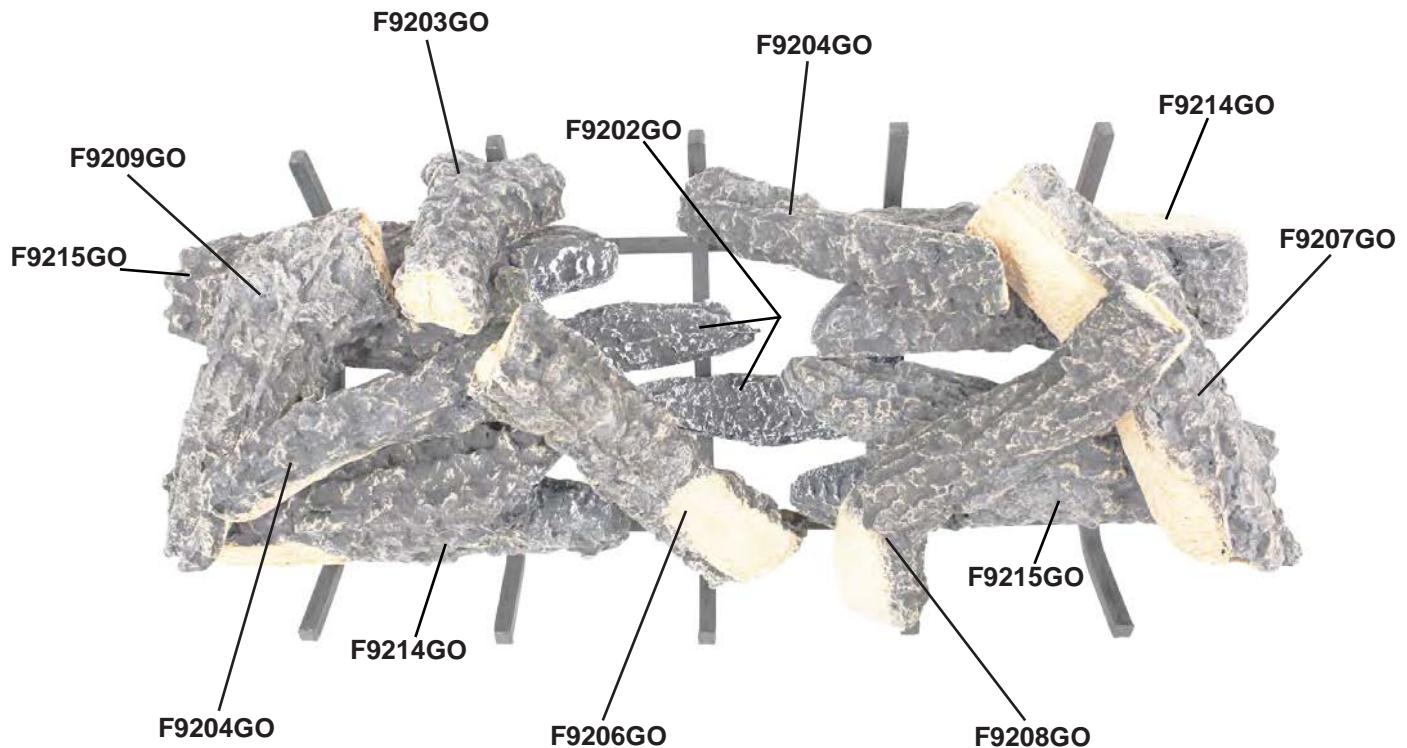

# WOODLAND TIMBERS

## INDIVIDUAL LOG DIAGRAM

F0713GO		F1509GO	
F9102GO		F9103GO	
F9113CH		F9202GO	
F9203GO		F9204GO	
F9206GO		F9207GO	

# WOODLAND TIMBERS

## INDIVIDUAL LOG DIAGRAM

F9208GO		F9209GO	
F9210GO		F9211GO	
F9212GO		F9213GO	
F9214GO		F9215GO	
F0017GO			
F2522GO			

# WOODLAND TIMBERS

## INDIVIDUAL LOG DIAGRAM

F0827GO



FR018GO

FR020GO



FR024GO



FR030GO



FR036GO

