

SINGLE SIDED LOG DIAGRAM


WTS2418RG





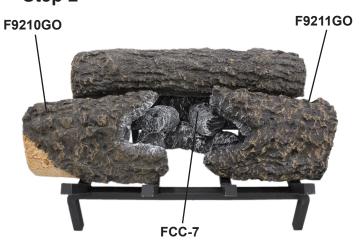


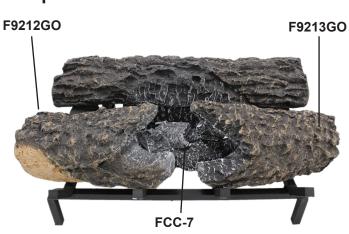

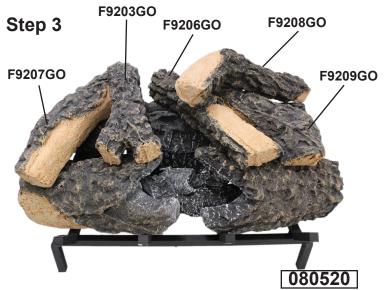


SINGLE SIDED LOG DIAGRAM

WTS3020RG

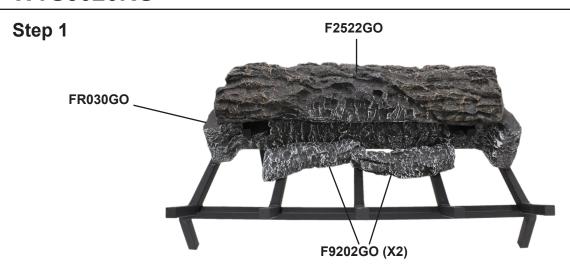


Step 2

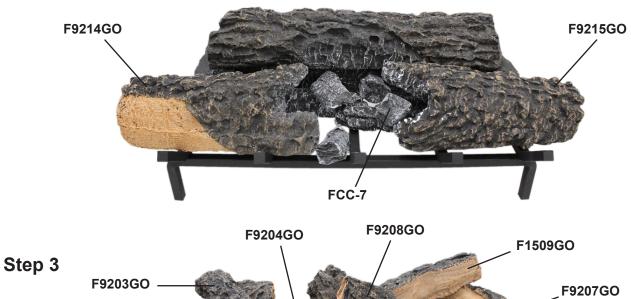





SINGLE SIDED LOG DIAGRAM

WTS3622RG

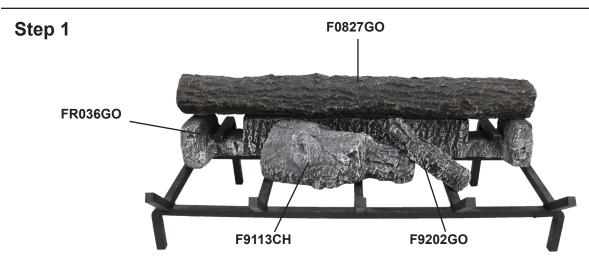

Step 2

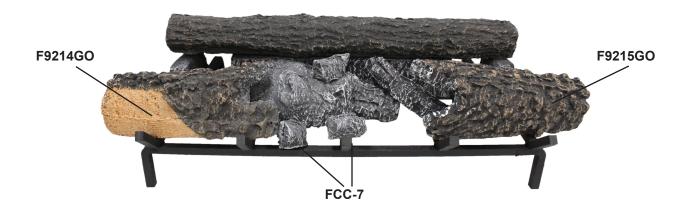


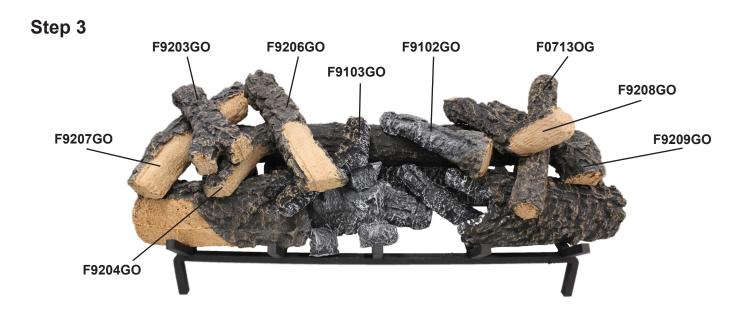


INDIVIDUAL LOG DIAGRAM

F0713GO	F1509GO
F9102GO	F9103GO
F9113CH	F9202GO
F9203GO	F9204GO
F9206GO	F9207GO
F9208GO	F9209GO

INDIVIDUAL LOG DIAGRAM

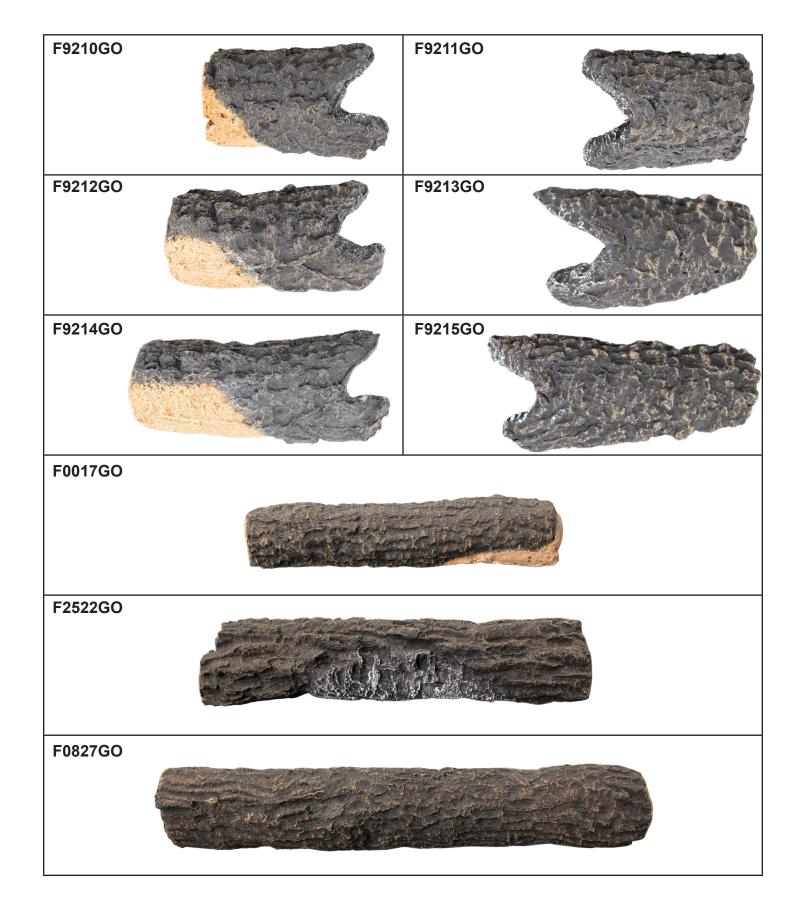

INDIVIDUAL LOG DIAGRAM

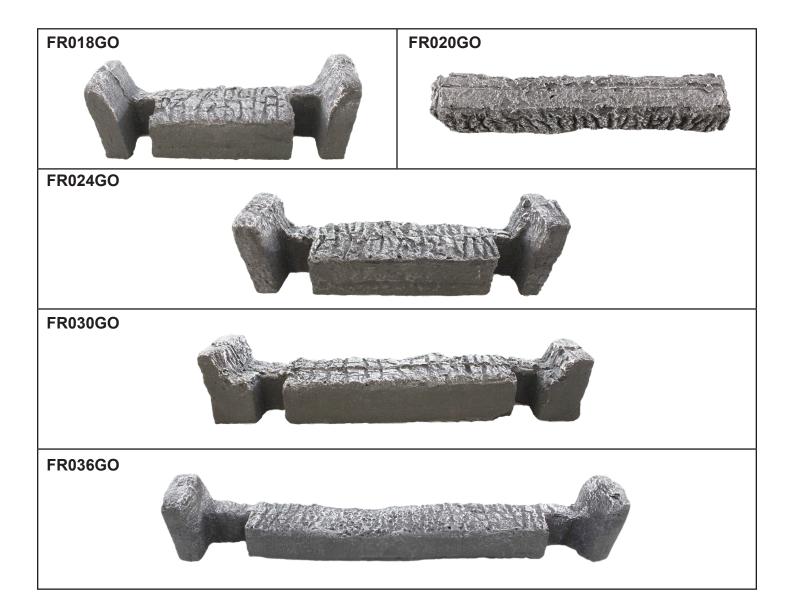

RADIANT GLOW BRACKET INSTRUCTIONS

PLEASE REFER TO ACCESSORY KIT INSTRUCTIONS FOR BURNER AND VALVE INSTALLATION A VIDEO VERSION OF THIS INSTRUCTION MAY BE FOUND AT www.youtube.com/watch?v=AohLv2XcA4E

WARNING: This is a supplemental instruction to clarify the installation of the radiant glow kit, carefully read all

instructions before attempting to install this log set.



PARTS LIST

- 1. RADIANT GLOW BRACKET
- 2. EMBERS





STEP 1: Figure 1a illustrates how the radiant glow bracket slides and rests on the back of the burner pan. For installation on burner pans without pilots center the bracket on the back of the burner pan as shown in figure 1b. For installation on burner pans with a pilot install the bracket on the back of the burner pan allowing 1" clearance around the pilot assembly as shown in figure 1c. The grate can then be pulled forward over the burner pan, as shown in figure 1e.





STEP 2: Fill the burner pan with the appropriate media as shown in figure 2a (sand for NG and vermiculite for LP) Install the grate over the burner pan. The front legs of the grate go around the burner pan and about 1" in front of the burner pipe as shown in figure 2b.





STEP 3: Stuff the embers under the Radiant Riser to fill the gap between the radiant glow bracket and the riser. Also use the embers to cover the visible surface of the radiant bracket as shown in figure 3.



STEP 4: Stuff the embers into the notches of the Radiant Riser and cover all visible burner media as shown in figure 4. Now install the Radiant Heat series logs according to the log diagram sheet included with you log set.

SAFETY PRECAUTIONS

- Do not place clothing or other flammable items on or near the gas log set.
 Items placed near the log set can become very hot due to the radiant heat of the log set.
- Do not touch the log set and educate all children of the danger of the gas log set. Young children should be supervised when they are in the same room as the log set.
- Due to the high temperature, the gas log set should be located away from furniture and draperies.